
AC3MQ–01

REMOVAL

1. DISCHARGE REFRIGERANT FROM REFRIGERATION SYSTEM

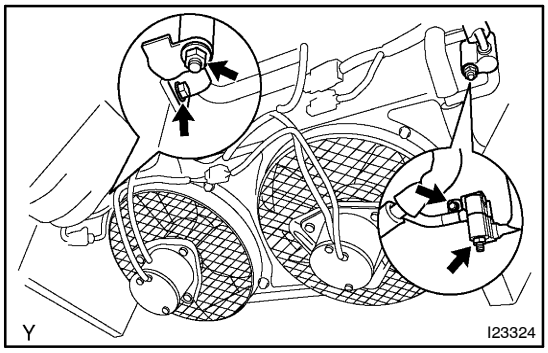

2. DISCONNECT LIQUID TUBE AND DISCHARGE TUBE

(a) Remove the 2 nuts, and disconnect both tubes.

NOTICE:

Cap the open fittings immediately to keep moisture out of the system.


(b) Remove the 2 bolts holding the tubes to the brackets.

3. REMOVE CONDENSER

(a) Disconnect the 2 condenser fan connectors.

(b) Hold the condenser and remove the 6 bolts and condenser with condenser brackets.

4. REMOVE LH AND RH CONDENSER BRACKETS

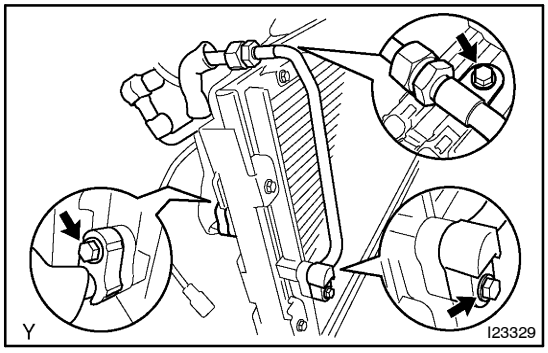

5. REMOVE LIQUID TUBE AND DISCHARGE TUBE

(a) Remove the 3 bolts and liquid tube.


(b) Remove the 3 bolts and discharge tube.

NOTICE:

Cap the open fittings immediately to keep moisture out of the system.

6. REMOVE UPPER AND LOWER DUST COVERS

Remove the 7 bolts, upper cover and lower cover.

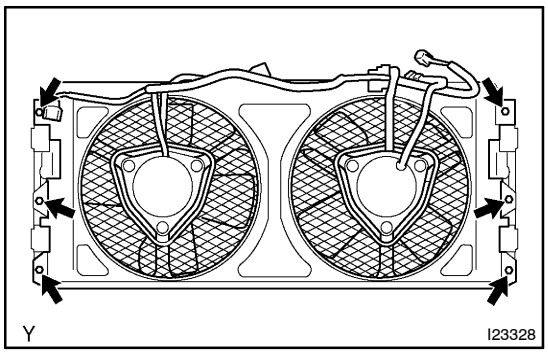

7. REMOVE CONDENSER FAN ASSEMBLY

Remove the 6 bolts, 6 cushions and condenser fan assembly.