
AC3MT–01

REMOVAL

1. DISCHARGE REFRIGERANT FROM REFRIGERANT SYSTEM

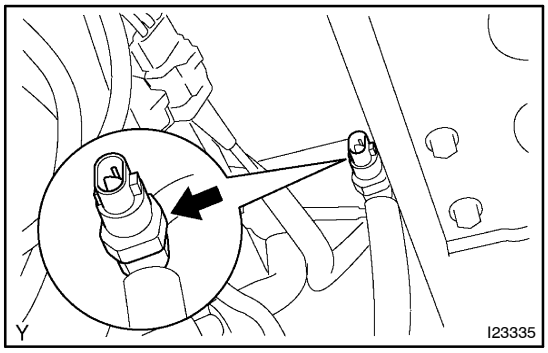

2. REMOVE PRESSURE SWITCH

(a) Disconnect the pressure switch connector.

(b) Remove the pressure switch from the liquid tube.