
AC3MU–01

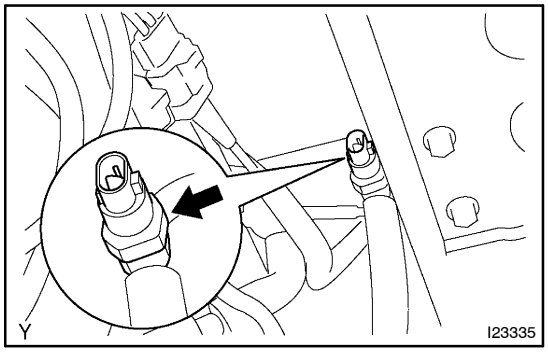

INSTALLATION

1. INSTALL PRESSURE SWITCH

Install the pressure switch to the liquid tube.

Torque: 10.8 N·m (110 kgf·cm, 8 ft·lbf)

2. EVACUATE AIR IN REFRIGERATION SYSTEM AND CHARGE WITH REFRIGERANT

Specified amount:

1,950 ± 50 g (68.78 ± 1.76 oz.) for LHD

2,000 ± 50 g (70.54 ± 1.76 oz.) for RHD

3. INSPECT FOR LEAKAGE OF REFRIGERANT

Using a gas leak detector, check leakage of refrigerant.

If there is leakage, check the tightening torque at the joints.