
BE2B1–01


INSPECTION

1. INSPECT FRONT FOG LIGHT SWITCH CONTINUITY

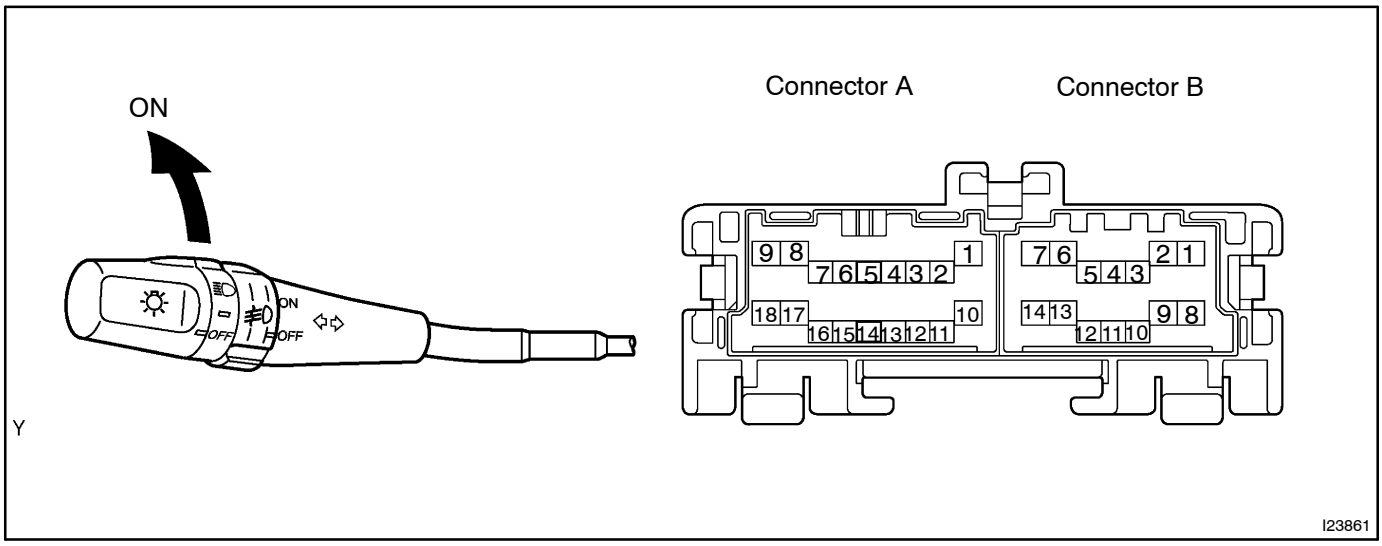

Switch position	Tester connection	Specified condition
OFF	–	No continuity
ON	A5 – A14	Continuity


If the continuity is not as specified, replace the switch.

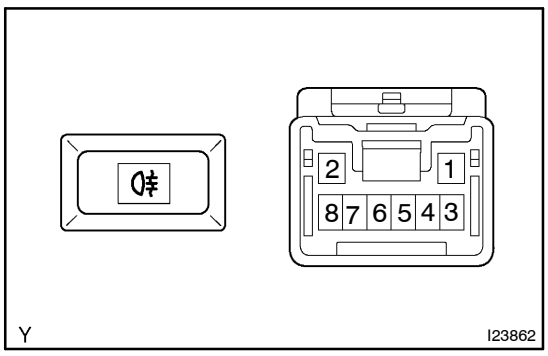

2. INSPECT REAR FOG LIGHT SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
OFF	–	No continuity
ON	2 – 5	Continuity

If the continuity is not as specified, replace the switch.

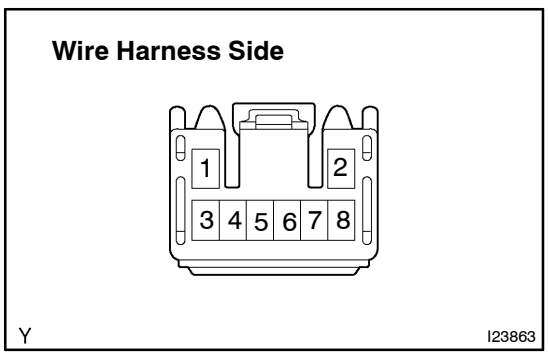


3. INSPECT REAR FOG LIGHT SWITCH CIRCUIT

Disconnect the connector from the switch and inspect the connector on the wire harness side.

Tester connection	Condition	Specified condition
1 – Ground	Constant	Continuity
3 – Ground	Light Control Switch TAIL or HEAD	Battery voltage
4 – Ground	Constant	Battery voltage
5 – Ground	Light Control Switch HEAD	Continuity
6 – Ground	Front Fog Light Switch ON	Continuity
7 – Ground	Constant	Continuity
8 – Ground	Constant	Continuity


If the circuit is not as specified, inspect the circuits connected to other parts.

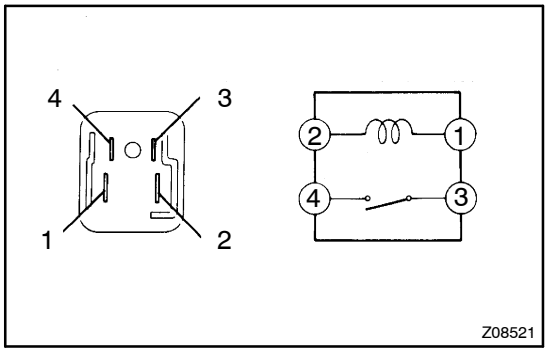

4. INSPECT HEAD RELAY CONTINUITY

Condition	Tester connection	Specified condition
Constant	1 – 2	Continuity
Apply B+ between terminals 1 and 2.	3 – 4	Continuity

If the continuity is not as specified, replace the relay.

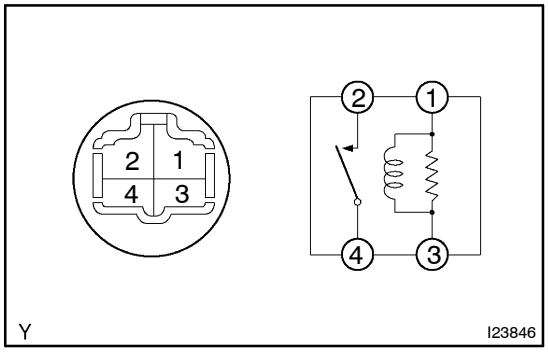

5. INSPECT TAIL, FR FOG AND RR FOG RELAYS CONTINUITY

Condition	Tester connection	Specified condition
Constant	1 – 3	Continuity
Apply B+ between terminals 1 and 3.	2 – 4	Continuity

If the continuity is not as specified, replace the relay.