
COMBINATION METER


BE1CK–03

CIRCUIT

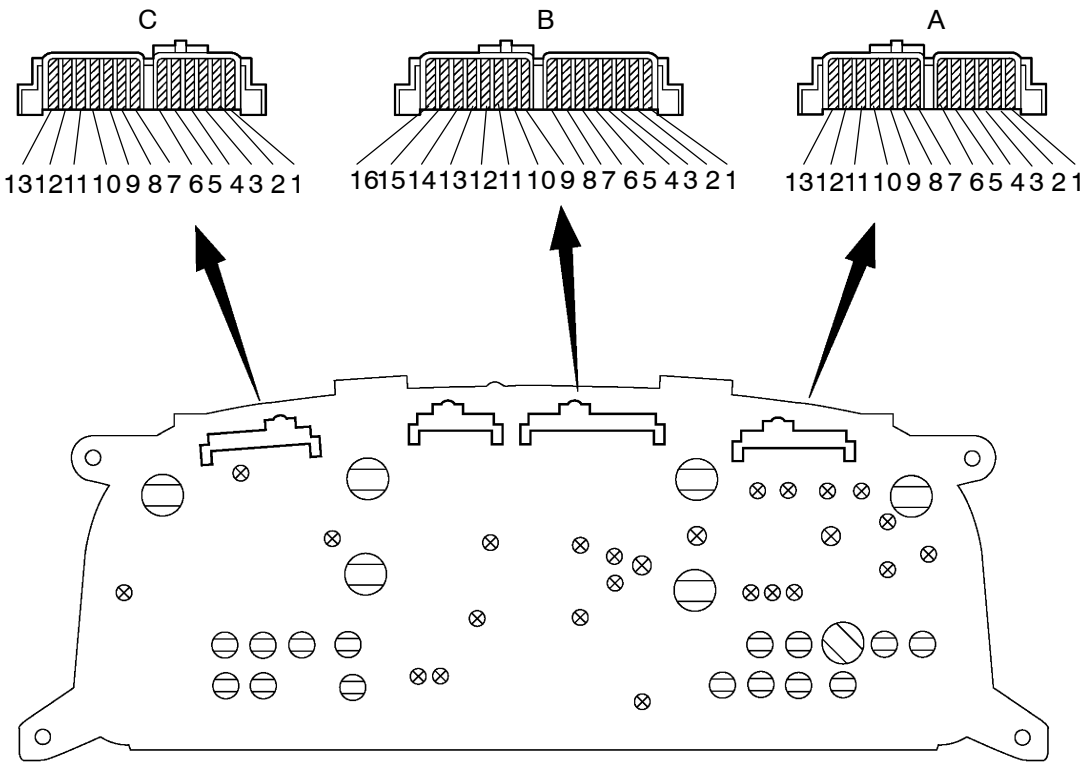

Y

I14813

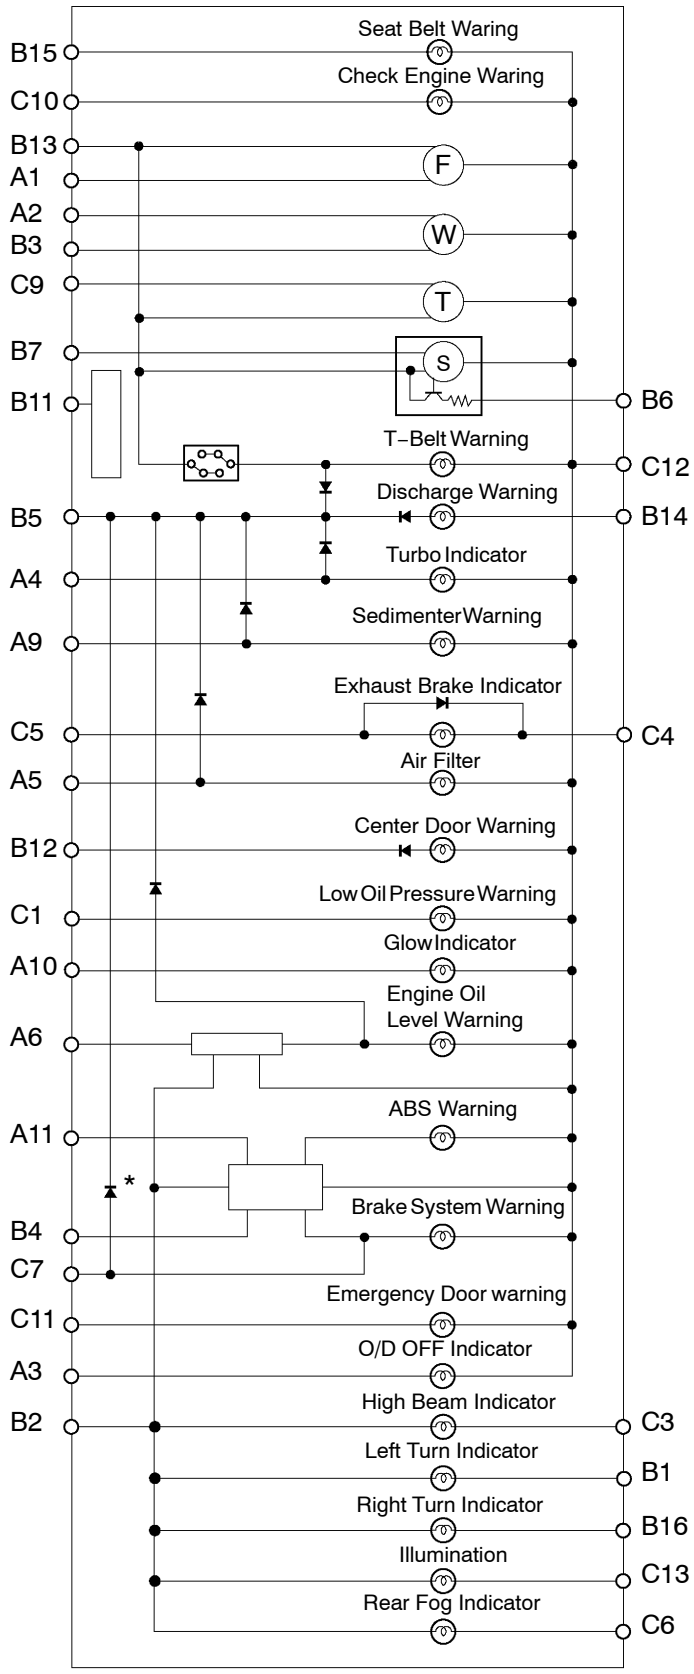

F : Fuel Sender Gauge
T : Tachometer
W : Water Temperature Sender Gauge
S : Speedometer

No.		Wiring Connector Side
A	1	Fuel Sender Gauge
	2	Ground
	3	O/D OFF Switch (A/T)
	4	Pre–heating Timer (15B–FT)
	5	Air Cleaner Warning Sensor (Diesel)
	6	Engine Oil Level Sensor
	9	Sedimenter Buzzer (Diesel)
	10	Pre–heating Timer (14B, 15B–FT, 1HZ), Engine ECU (15B–FTE)
	11	ABS ECU (w/ ABS)
B	1	Turn Signal Switch (L)
	2	Ground
	3	Water Temperature Sender Gauge
	4	ABS ECU
	5	ALT Terminal L
	6	Tachograph, Automatic Door Control ECU, Engine ECU, ECT ECU
	7	Speed Sensor
	11	Speed Sensor Power Source
	12	Center Door Courtesy Switch
	13	Ground
	14	IGN Fuse
	15	Seat Belt Buckle Switch
	16	Turn Signal Switch (R)
C	1	Oil Pressure Switch
	3	Headlight Dimmer Switch
	4	Ground (15B–FTE), Exhaust Brake Switch (Except 15B–FTE)
	5	Exhaust Brake Switch (15B–FTE), ECU–IG Fuse (Except 15B–FTE)
	6	Rear Fog Light Switch
	7	Brake Fluid Level Warming Switch Parking Brake Switch
	9	Pick–up Sensor (14B, 15B–FT, 1HZ), Engine ECU (15B–FTE)
	10	Engine ECU (15B–FTE, 3RZ–FE)
	11	Emergency Door (Courtesy) Switch
	12	GAUGE Fuse
	13	Tail Relay

*: Australia only

Y

I23865