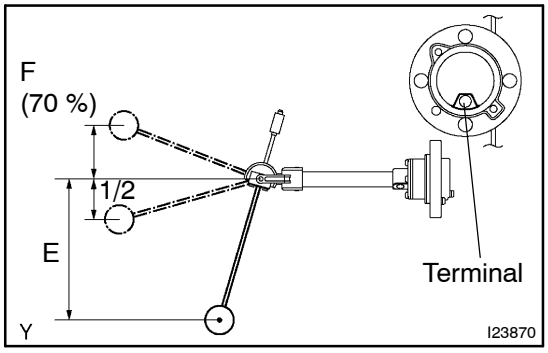


BE2B2–01

INSPECTION

LPG Engine:

INSPECT FUEL SENDER GAUGE

Measure the resistance between the terminal and body ground at each float position.

Float position: mm (in.)	Resistance (Ω)
F (70 %): 54.6 (2.15)	Approx. 3
1/2: 40.6 (1.60)	Approx. 32.5
E: 141.3 (5.56)	Approx. 110

If the resistance value is not as specified, replace the sender gauge.