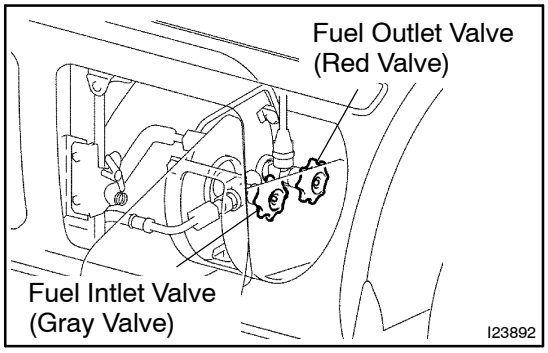


FUEL TANK AND LINE (1BZ–FPE)


BO4EZ–01

ON–VEHICLE INSPECTION

LEAK CHECK

(a) With the ignition switch ON, slowly open the fuel outlet valve (red valve).

(b) Open the fuel inlet valve (gray valve).

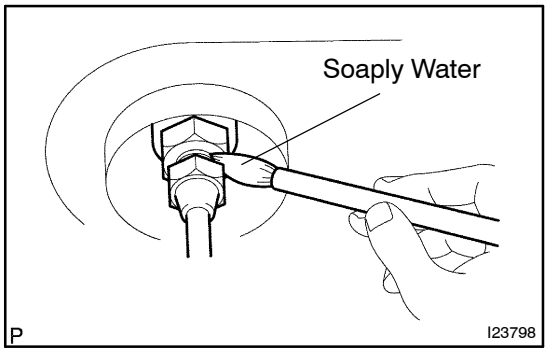

(c) Check there is no leakage by applying soaply water to the connecting parts.

If there is leakage, close the connecting parts more tightly and then perform a leak check again.

CAUTION:

Do not tighten the connecting parts over the specified torque.

(d) Wipe off the applied soaply water.

(e) Close the fuel inlet valve (gray valve).