
BO4F1–01

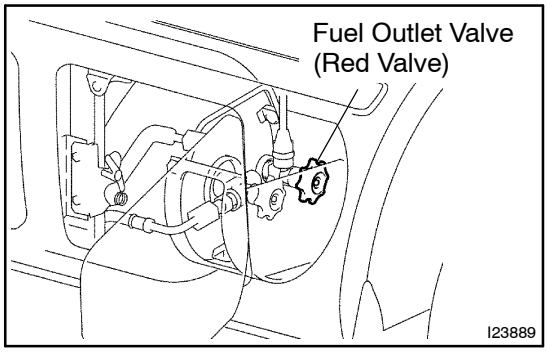

REPLACEMENT

1. PREVENT FUEL FROM FLOWING OUT

CAUTION:

Before removing the fuel system parts, be sure to prevent the fuel from flowing out.

(a) Close the fuel outlet valve (red valve).

(b) Start the engine to consume LP gas.

NOTICE:

Do not race the engine to consume gas, because it might damage the catalyst.

(c) After the engine stops naturally, turn the ignition switch OFF.

2. REMOVE AIR INLET COVER AND FUEL LID ASSEMBLY

Remove the 8 screws, air inlet cover and fuel lid assembly.

3. DISCONNECT FUEL INLET PIPE AND FUEL MAIN TUBE NO. 1

Disconnect the fuel inlet pipe and fuel main tube No. 1.

CAUTION:

Be careful not to damage the valves and pipes.

4. SUPPORT FUEL TANK ASSEMBLY WITH JACK

5. REMOVE LPG FUEL TANK ASSEMBLY

(a) Disconnect the fuel sender gauge connector.

(b) Remove the 8 bolts and LPG fuel tank assembly.

CAUTION:

Be careful not to damage the LPG fuel tank assembly.

6. REMOVE FUEL TANK BRACKET

Remove the 4 bolts and fuel tank bracket from the body.

7. REMOVE 2 FUEL TANK STAYS AND FUEL TANK LOWER COVER

(a) Remove the 4 bolts and LPG fuel tank assembly.

(b) Remove the 2 bolts and 2 fuel tank stays from the fuel tank lower cover.

8. REINSTALL 2 FUEL TANK STAYS AND FUEL TANK LOWER COVER

(a) Install the 2 fuel tank stays to the fuel tank lower cover with the 2 bolts.

Torque: 78 N·m (800 kgf·cm, 58 ft·lbf)

(b) Installel the LPG fuel tank assembly to the 2 fuel tank stays with the 4 bolts.

Torque: 78 N·m (800 kgf·cm, 58 ft·lbf)

(c) Support the LPG fuel tank assembly with the jack.

9. REINSTALL FUEL TANK BRACKET

Install the fuel tank bracekt to the body with the 4 bolts.

Torque: 78 N·m (800 kgf·cm, 58 ft·lbf)

10. REINSTALL LPG FUEL TANK ASSEMBLY

(a) Install the LPG fuel tank assembly with the 8 bolts.

Torque: 78 N·m (800 kgf·cm, 58 ft·lbf)

CAUTION:

Be careful not to damage the LPG fuel tank assembly.

(b) Connect the fuel sender gauge connector.

11. RECONNECT FUEL INLET PIPE AND FUEL MAIN TUBE NO. 1.

Connect the fuel inlet pipe and fuel main tube No. 1.

Torque: 73.5 N·m (750 kgf·cm, 54 ft·lbf)

CAUTION:

- **Do not tighten the connecting parts over the specified torque.**
- **Be careful not to damage the valves and pipes.**

12. REINSTALL AIR INLET COVER AND FUEL LID ASSEMBLY

Install the air inlet cover and fuel lid assembly with the 8 screws.

13. LEAK CHECK (See page BO–5)

CAUTION:

After installing the fuel system parts, be sure to perform a leak check.