
IN017–02

VEHICLE LIFT AND SUPPORT LOCATIONS

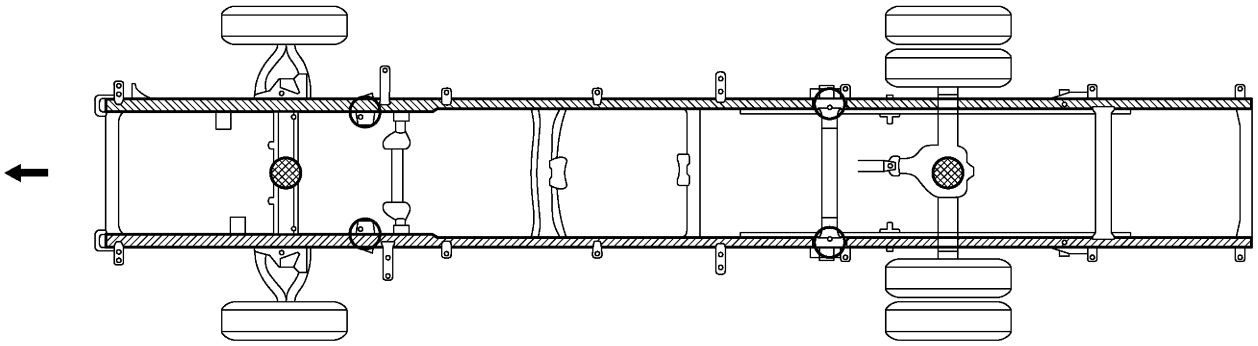

JACK POSITION

Front..... Center of cross member

Rear..... Center of rear axle housing

OIL TYPE JACK POSITION

SUPPORT POSITION

Safety stand .....

N

B02423