

CH0AF–08

REPLACEMENT


1. REPLACE FRONT BEARING

(a) Remove the 4 screws and bearing retainer.

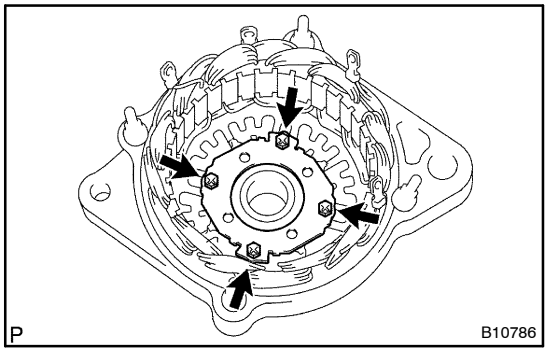

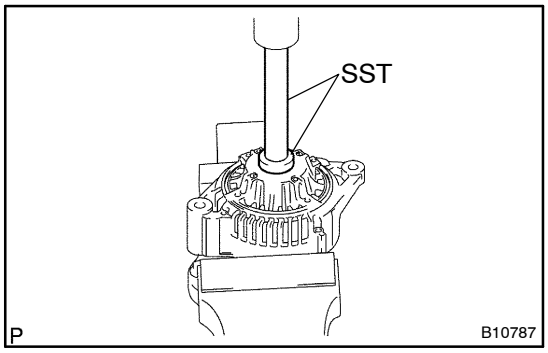

(b) Using SST and a press, press out the bearing.
SST 09950–60010 (09951–00340), 09950–70010 (09951–07100)

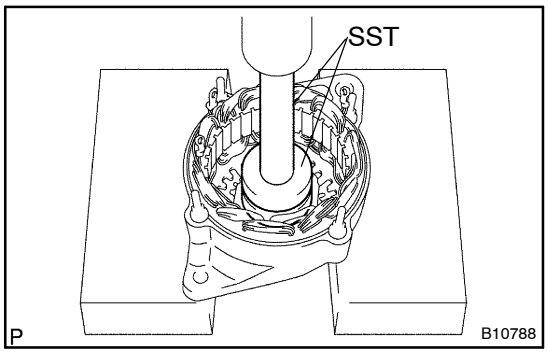

(c) Using SST and a press, press in a new bearing.
SST 09950–60010 (09951–00500), 09950–70010 (09951–07100)

(d) Install the bearing retainer with the 4 screws.
Torque: 3.0 N·m (31 kgf·cm, 27 in.·lbf)


2. REPLACE REAR BEARING

(a) Using SST, remove the bearing cover (outside) and bearing.
SST 09820–00021


NOTICE:


Be careful not to damage the fan.

(b) Remove the bearing cover (inside).

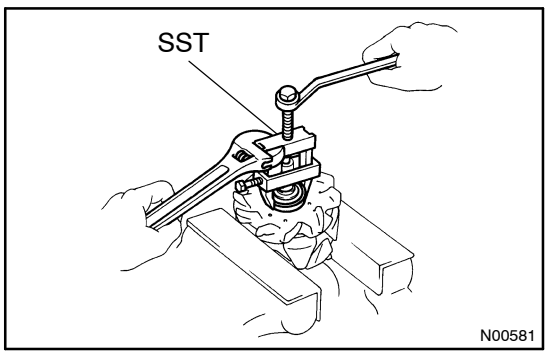


(c) Place the bearing cover (inside) on the rotor.

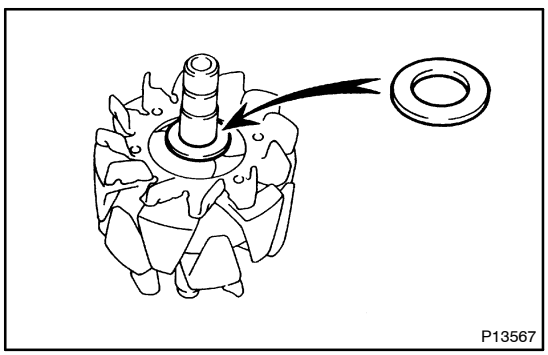

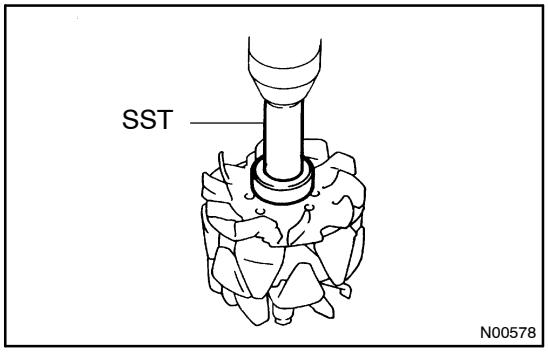

(d) Using SST and a press, press in a new bearing.
SST 09820–00031

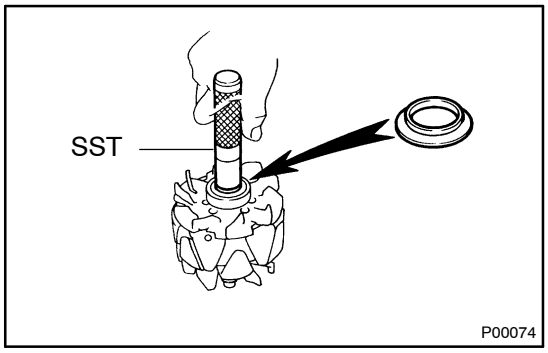

(e) Using SST, push in the bearing cover (outside).
SST 09285–76010