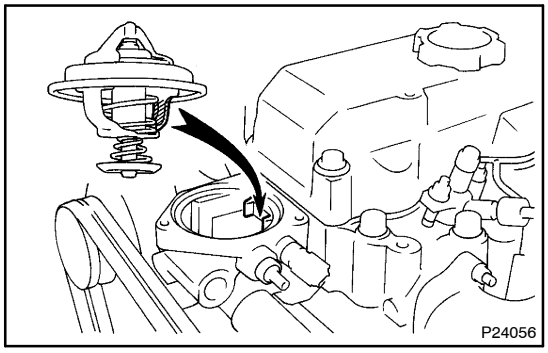


CO0LD–02

INSTALLATION

1. PLACE THERMOSTAT IN WATER OUTLET HOUSING

(a) Install a new gasket to the thermostat.

(b) Insert the thermostat body between the water outlet housing protrusions.

2. INSTALL WATER OUTLET

Install the water inlet with the 3 bolts.

Torque: 18.5 N·m (189 kgf·cm, 14 ft·lbf)

3. FILL WITH ENGINE COOLANT

4. START ENGINE, AND CHECK FOR COOLANT LEAKS