
DI9V5–01

Power Steering Oil Pressure Switch Circuit

CIRCUIT DESCRIPTION


Engine ECU controls the speed the most appropriate according to the signal from the power steering pressure sensor.

WIRING DIAGRAM

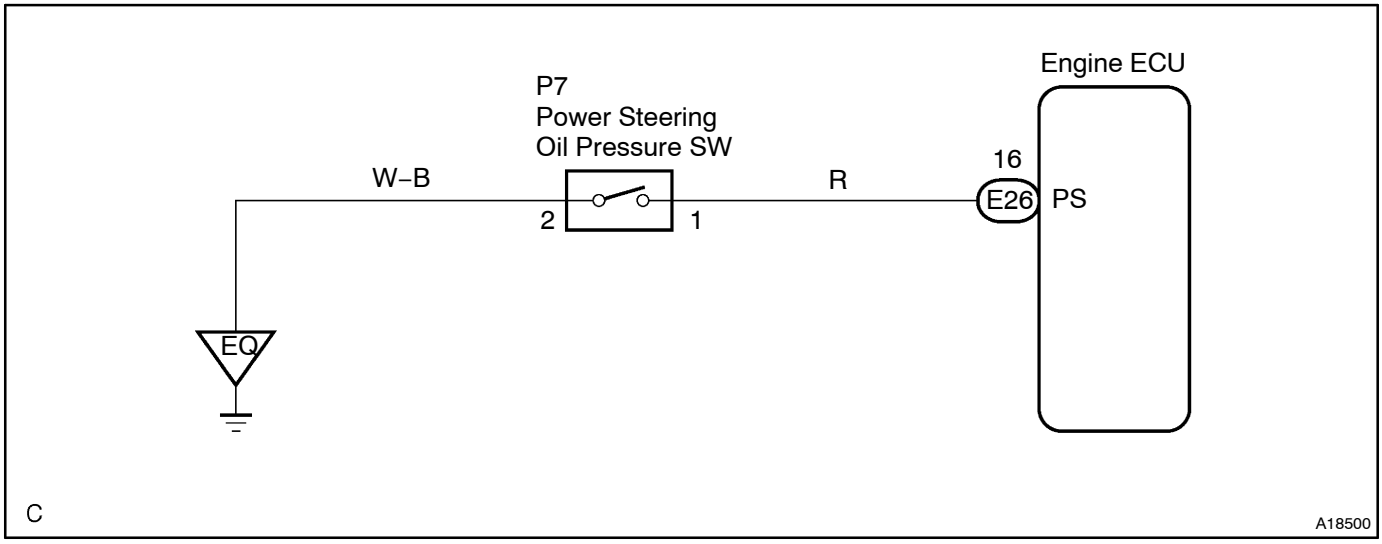

INSPECTION PROCEDURE

1	**Check power steering oil pressure switch.**

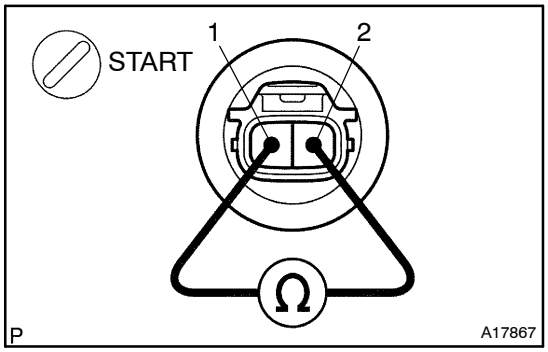

PREPARATION:

Start engine.

CHECK:

Check continuity between terminal 1 and 2 power steering oil pressure switch.

OK:

Condition	Standard
Turning steering wheel	Continuity
Facing straight ahead steering wheel	No continuity

NG → **Replace power steering oil pressure switch.**

OK

2	**Check for open and short in harness and connector between engine ECU and power steering oil pressure switch.**

NG → **Repair or replace harness or connector.**

OK

Check and replace engine ECU (See page IN–20).