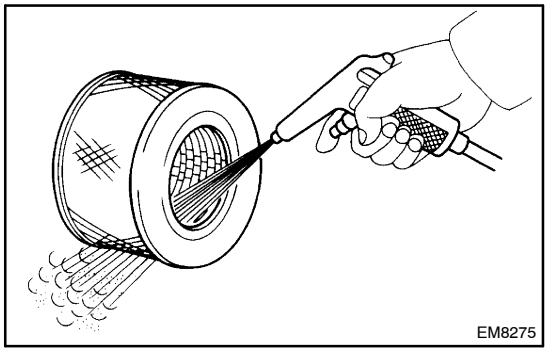


AIR FILTER

EM1U6–01

INSPECTION


1. REMOVE AIR FILTER

2. INSPECT AIR FILTER

Visually check that the filter element is not excessively dirty, damaged or oily.


3. CLEAN AIR FILTER

(a) Blow dirt off in the filter element with compressed air.

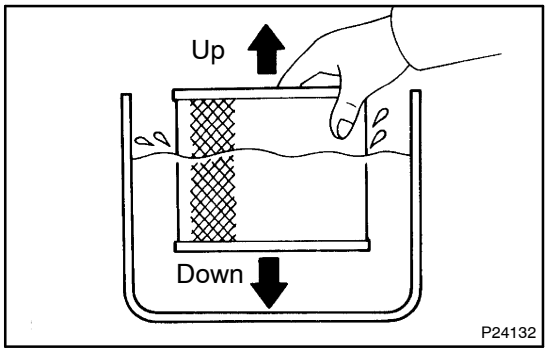

(b) Submerge the filter element in the water, and agitate it up and down more than 10 times.

(c) Repeat rinsing in clean water until rinsing water is clear.

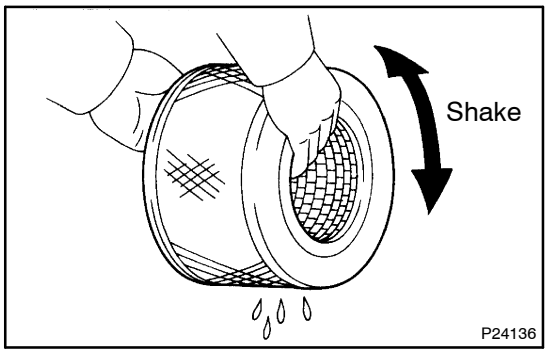

(d) Remove excess water by shaking the filter element or blowing with compressed air.

NOTICE:

Do not beat or drop filter element.

(e) Wipe off dust on the air cleaner case interior.

4. REINSTALL AIR FILTER