
EM0OE–02


DISASSEMBLY

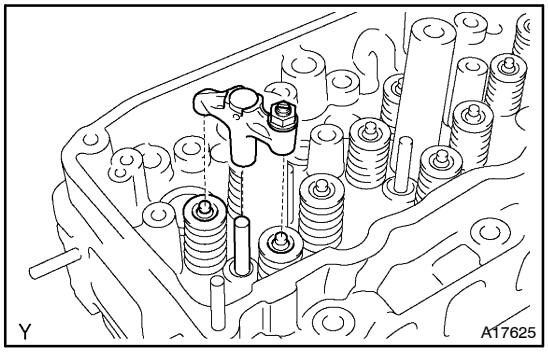

1. REMOVE VALVE BRIDGE AND PAD

HINT:

Arrange the valve bridge in correct order.

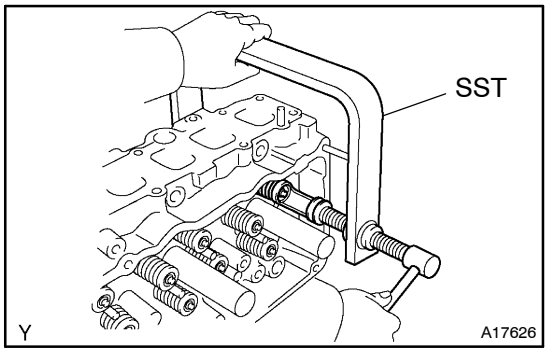

2. REMOVE VALVES


(a) Using SST, compress the valve spring and remove the 2 keepers.

SST 09202–70020 (09202–00010)

(b) Remove the spring retainer, valve spring, valve and spring seat.

HINT:

Arrange the valves, valve springs, spring seats and spring retainers in correct order.

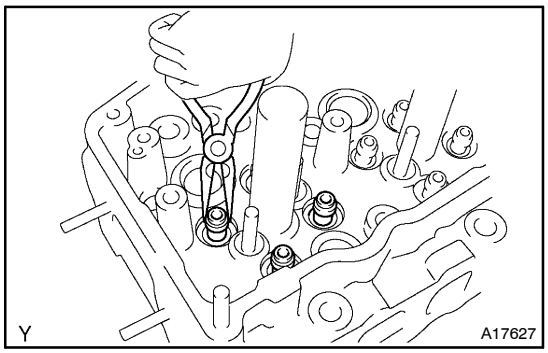

(c) Using needle–nose pliers, remove the oil seal.