
FU0B5–01

REMOVAL


1. REMOVE MAINTENANCE LID

Remove the 2 bolts and maintenance lid.

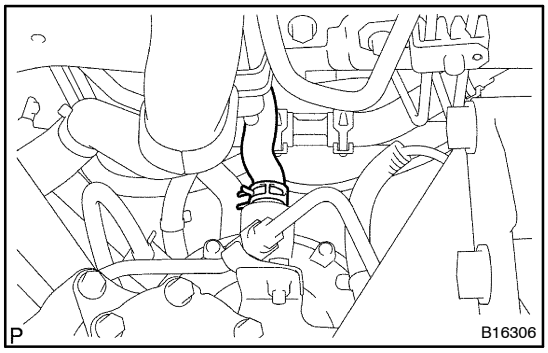


2. DISCONNECT AIR HOSE NO. 1

Slide the clip and disconnect the air hose No.1.

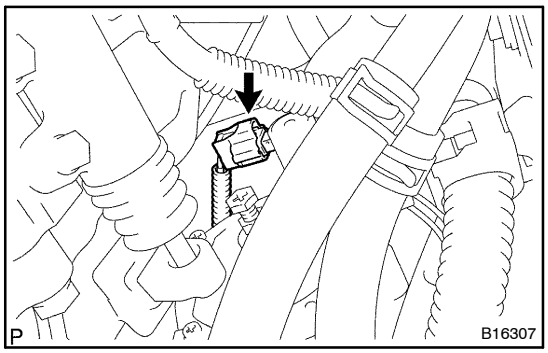


3. DISCONNECT SLOW LOCK SOLENOID VALVE CONNECTOR

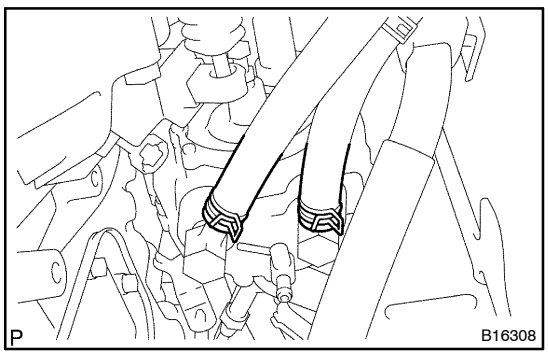


4. DISCONNECT WATER HOSE

Slide the 2 clips and disconnect water hoses.

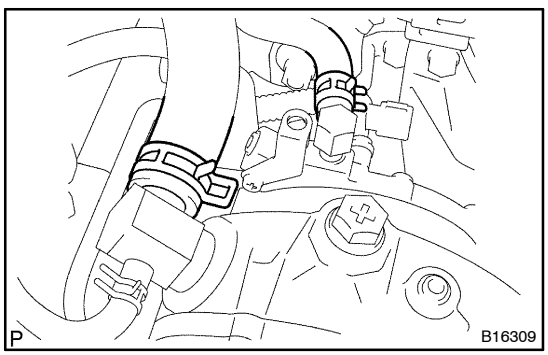

5. DISCONNECT FUEL HOSE NO. 1 AND NO. 2

Slide the 2 clips and disconnect fuel hose No.1 and No.2.

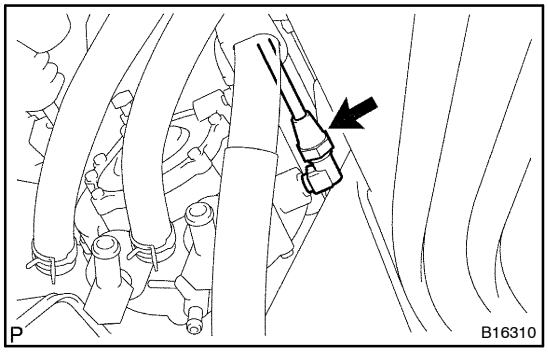

6. DISCONNECT LPG REGULATOR PIPE

Using a spanner, disconnect the LPG regulator pipe.

7. REMOVE LPG REGULATOR

Remove the 2 bolts and LPG regulator.