
FU0B8–01

INSTALLATION

1. INSTALL LPG REGULATOR

Install the LPG regulator with the 2 bolts.


Torque: 18 N·m (184 kgf·cm, 13 ft·lbf)

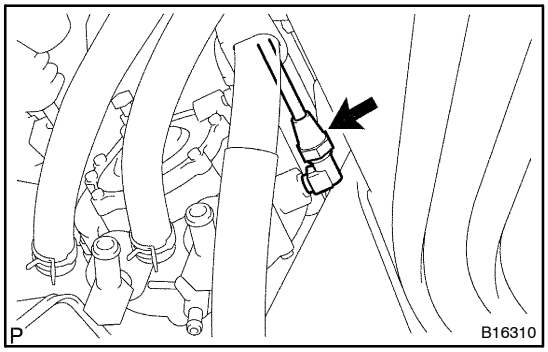

2. CONNECT LPG REGULATOR PIPE


Connect the LPG regulator pipe to the LPG regulator.

Torque: 37 N·m (377 kgf·cm, 27 ft·lbf)

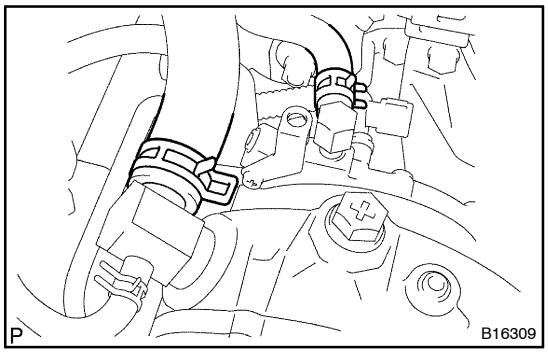

3. CONNECT FUEL HOSE NO. 1 AND NO. 2


Connect the fuel hose No.1 and No.2 with the 2 clips.

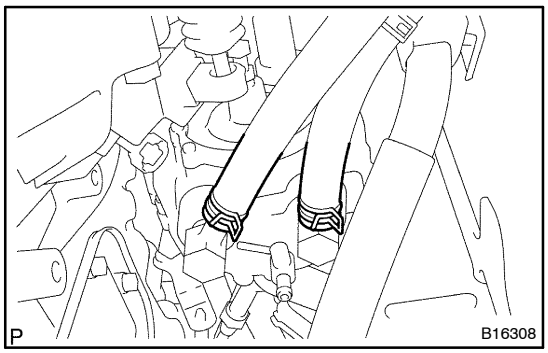

4. CONNECT WATER HOSE

Connect the water hoses with the 2 clips.

5. CONNECT SLOW LOCK SOLENOID VALVE CONNECTOR

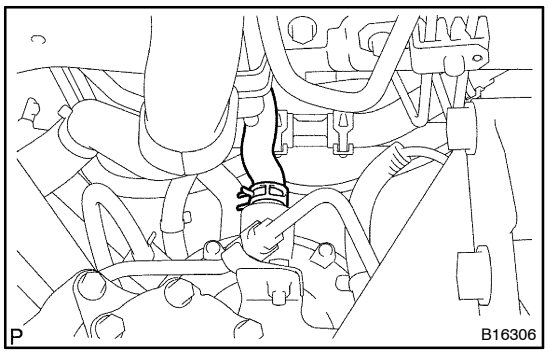

6. CONNECT AIR HOSE NO. 1

Connect the air hose No.1 with the clips.

7. INSTALL MAINTENANCE LID

Install the maintenance lid and 2 bolts.