

LPG CARBURETOR

COMPONENTS

FU07Q–02

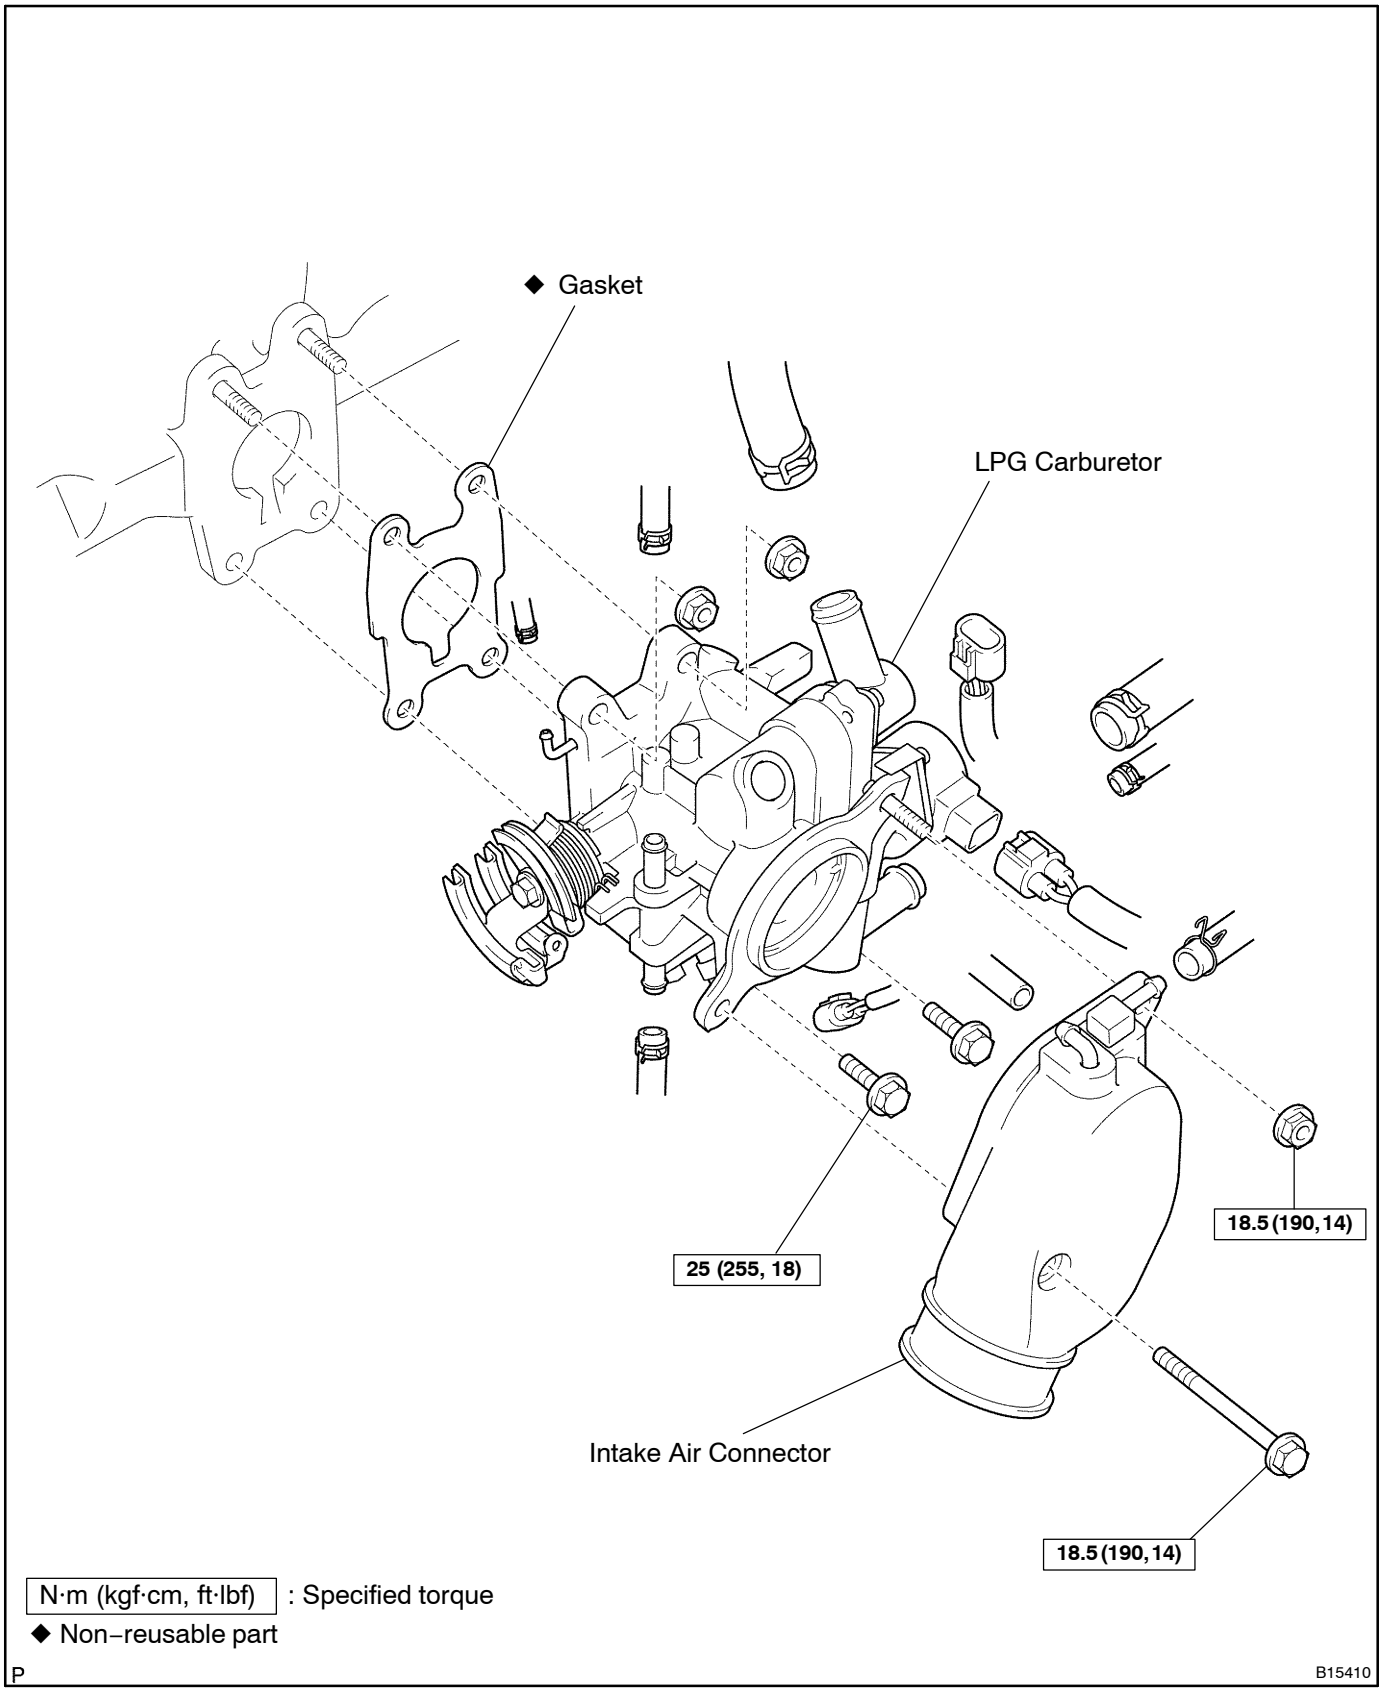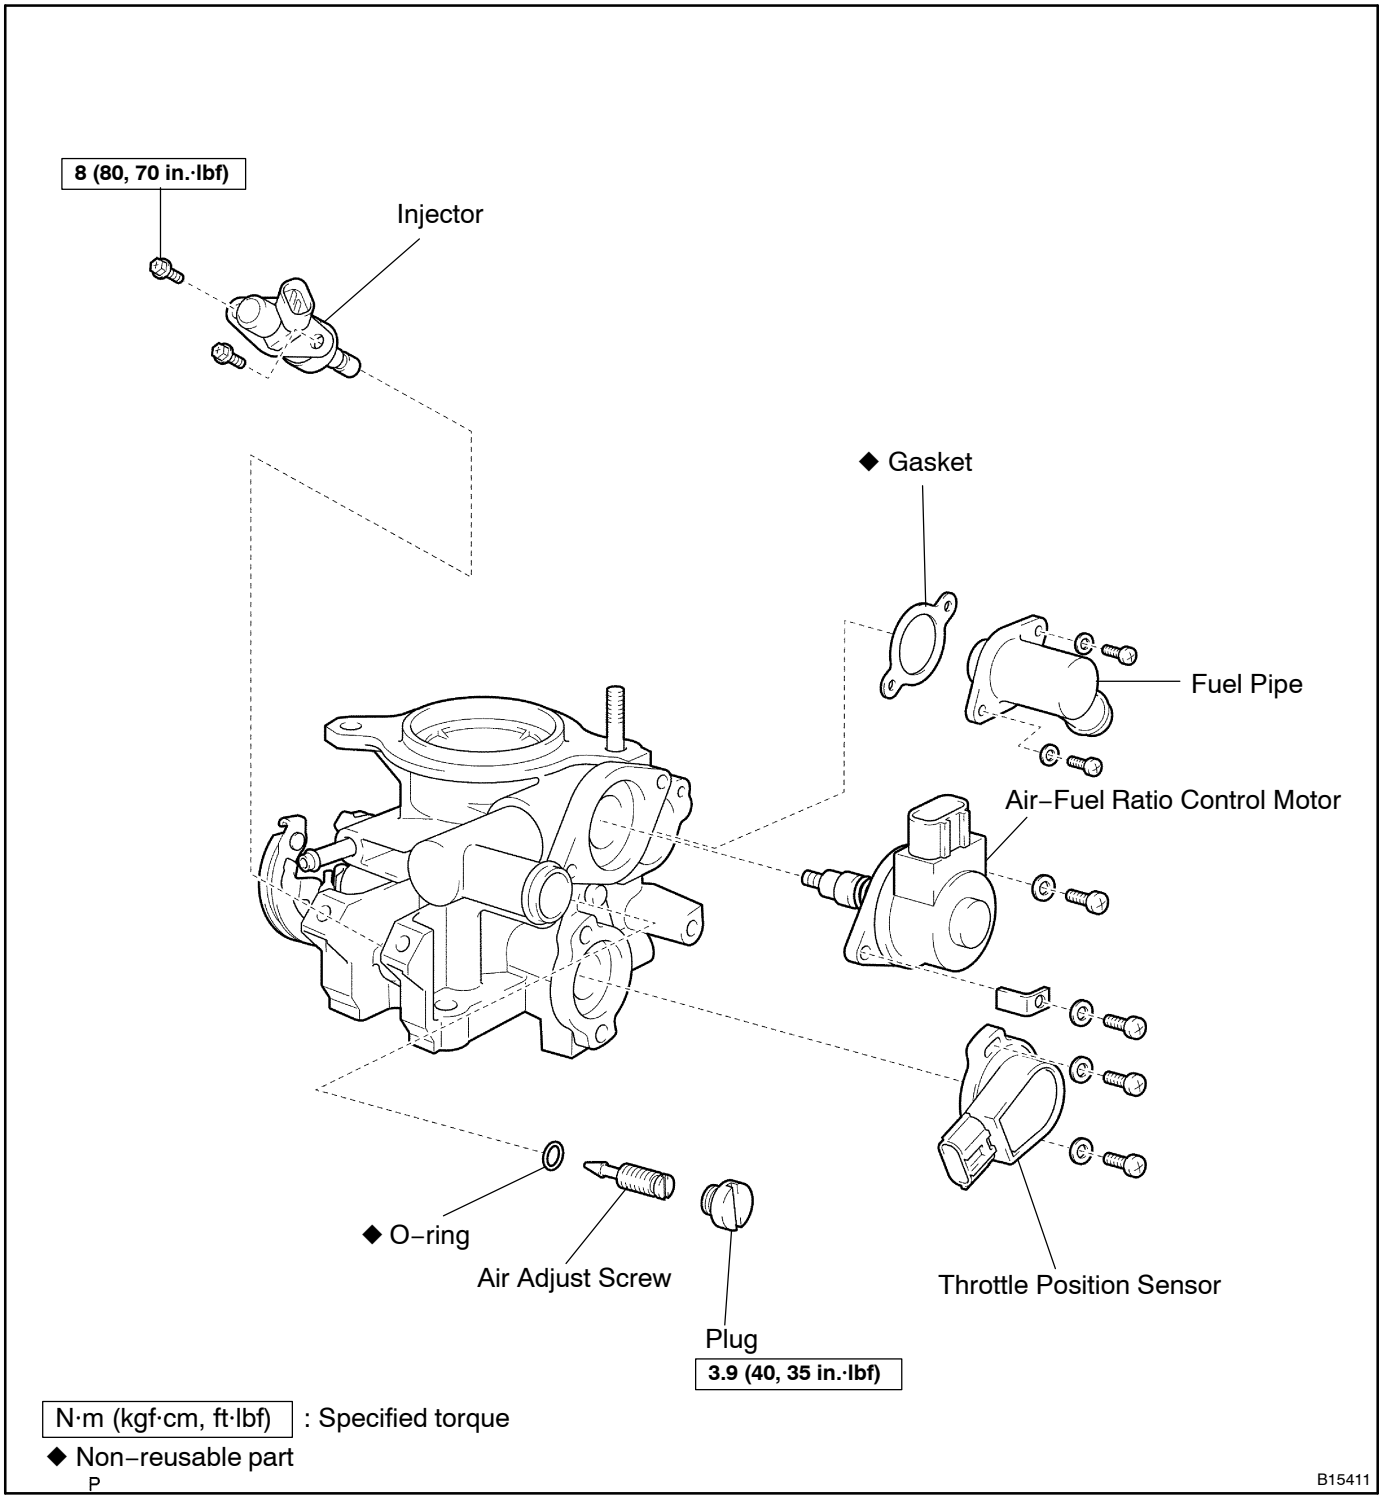


8 (80, 70 in.·lbf)
Injector
◆ Gasket
Fuel Pipe
Air–Fuel Ratio Control Motor
◆ O–ring
Air Adjust Screw
Plug
3.9 (40, 35 in.·lbf)
Throttle Position Sensor
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
P
B15411