
FU07R–02

REMOVAL

1. **REMOVE INTAKE AIR CONNECTOR**
2. **DISCONNECT ACCELERATOR CABLE**
3. **A/T:**
   DISCONNECT THROTTLE CABLE
4. **DISCONNECT 3 VACUUM HOSES**
5. **DISCONNECT 3 CONNECTORS**
6. **DISCONNECT 2 FUEL HOSES**

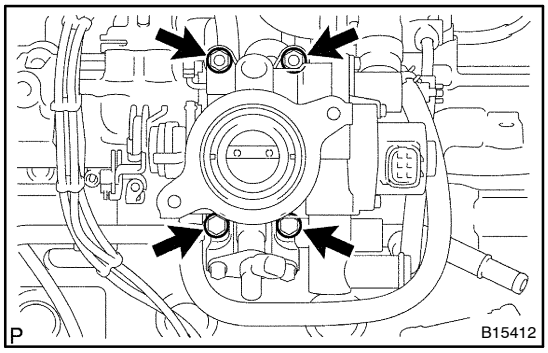

7. **REMOVE CARBURETOR**

Remove the 2 nuts, 2 bolts, carburetor and gasket.