

FU07S–02

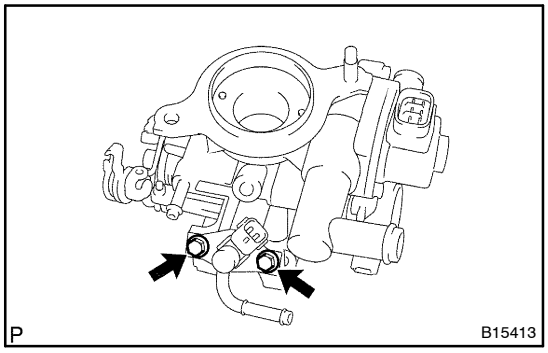

DISASSEMBLY

1. REMOVE INJECTOR

Remove the 2 bolts and injector.

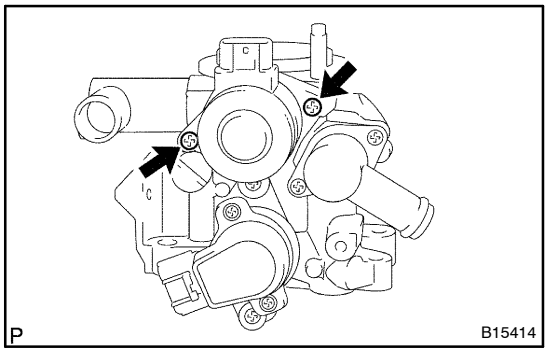


2. REMOVE AIR FUEL RATIO CONTROL MOTOR

Remove the 2 screws and air fuel ratio control motor.

3. REMOVE AIR ADJUST SCREW

(a) Remove the tight plug.
(b) Remove the air adjust screw.
(c) Remove the O–ring from the air adjust screw.

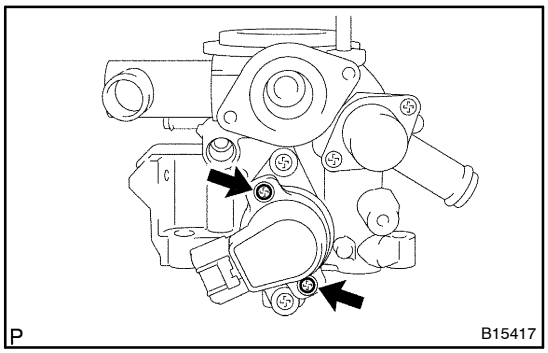

4. REMOVE THROTTLE POSITION SENSOR

Remove the 2 screws and throttle position sensor.

5. REMOVE FUEL PIPE