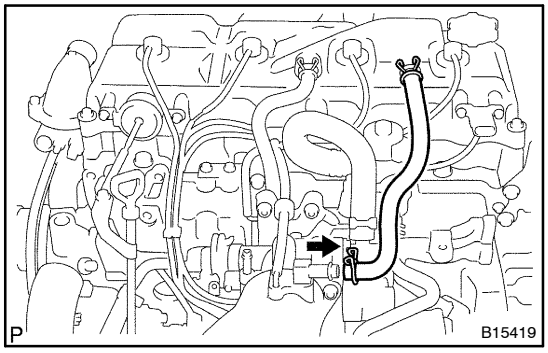


VACUUM LIMITTER (M/T)

FU07X–02

ON–VEHICLE INSPECTION

INSPECT VACUUM LIMITTER

(a) Disconnect the air hose from the intake air connector.
(b) Check that air is not absorbed into the air hose at the idle speed.

HINT:
Little amount of air is absorbed in since the vacuum limiter is not completely sealed.

(c) Race the engine speed at 3,000 rpm or more. With the engine speed decreasing, check that air is absorbed into the air hose.
(d) Connect the air hose.