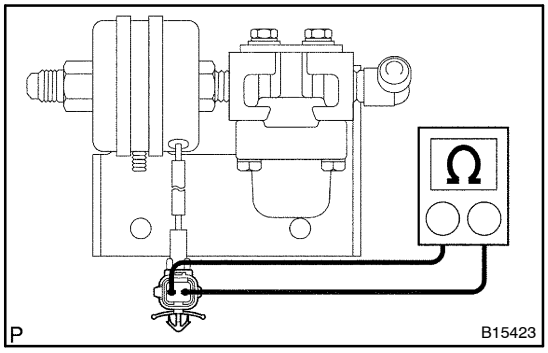


LPG SOLENOID VALVE

FU081–02

ON–VEHICLE INSPECTION

INSPECT LPG SOLENOID VALVE RESISTANCE

(a) Disconnect the solenoid connector.

(b) Using an ohmmeter, measure the resistance between terminals.

Resistance: 8.5 – 10.5 Ω at 20 °C (68 °F)

(c) Connect the solenoid connector.