
FU0B9–01


REMOVAL

1. DISCONNECT LPG SOLENOID CONNECTOR

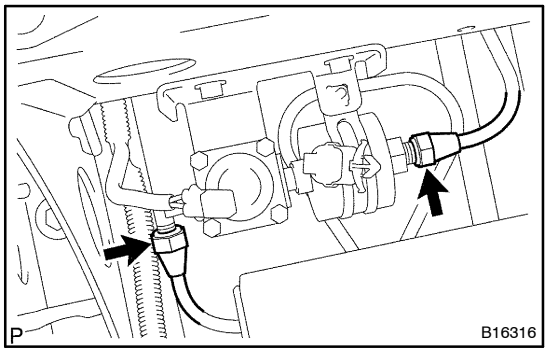

2. REMOVE LPG SOLENOID

(1) Disconnect the fuel tube No.1 from the LPG solenoid.
(2) Disconnect the fuel tube No.2 from the LPG filter.

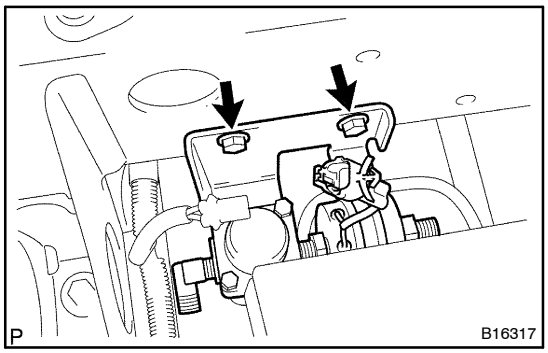

(3) Remove the 2 bolts and LPG solenoid with bracket.
(4) Remove the 3 bolts and LPG solenoid with filter from the bracket.
(5) Remove the LPG solenoid from the filter.