
FU0BB–01

INSTALLATION

1. INSTALL LPG SOLENOID


(a) Install the LPG solenoid to the LPG filter.
Torque: 37 N·m (377 kgf·cm, 27 ft·lbf)

(b) Install the LPG solenoid with LPG filter to the bracket, with the 3 bolts.
Torque: 17.5 N·m (175 kgf·cm, 13 ft·lbf)

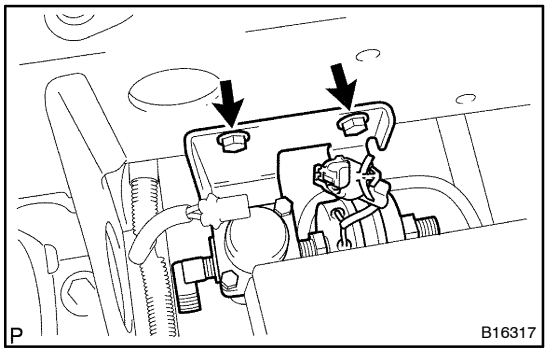

(c) Install the LPG solenoid with bracket, with the 2 bolts.
Torque: 25 N·m (250 kgf·cm, 18 ft·lbf)

(d) Apply adhesive to the LPG solenoid and LPG filter.
Adhesive:
Part No. 08833–00080, THREE BOND 1344, LOCKTITE 242 or equivalent.

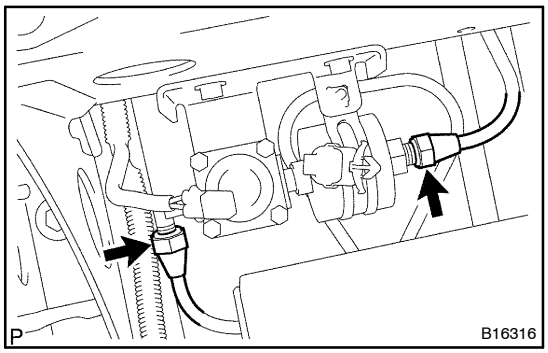

(e) Connect the fuel tube No.1 to the LPG solenoid.
Torque: 37 N·m (377 kgf·cm, 27 ft·lbf)

(f) Connect the fuel tube No.2 to the LPG filter.
Torque: 37 N·m (377 kgf·cm, 27 ft·lbf)

2. CONNECT LPG SOLENOID CONNECTOR