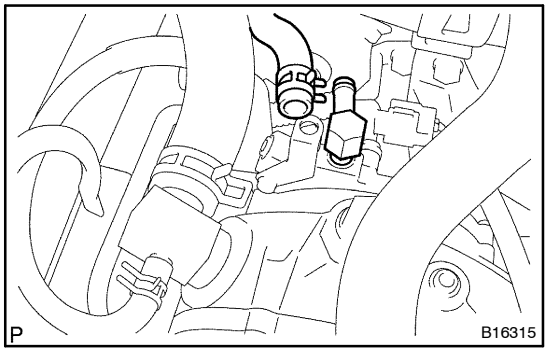


SLOW LOCK SOLENOID VALVE

FU082–02

ON–VEHICLE INSPECTION

1. INSPECT SLOW LOCK SOLENOID VALVE AIR TIGHTNESS

(a) Disconnect the fuel hose from the LPG regulator.
(b) Turn the ignition switch ON.
(c) Check for the leakage of LPG from the fuel hose.
Standard: No leakage of LPG

2. INSPECT SLOW LOCK SOLENOID VALVE OPERATION

(a) Disconnect the fuel hose from the LPG regulator.
(b) Turn the ignition switch ON.
(c) Check the leakage noise of LPG from the fuel nose while turning the ignition switch ON and OFF.
Standard:
When turning the ignition switch ON and OFF, LPG leaks for a moment.

NOTICE:
When rechecking, start from (b) step.