
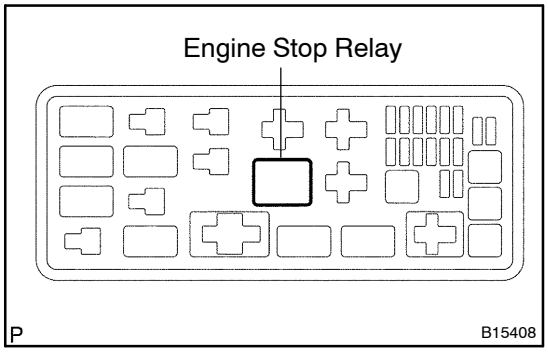


ENGINE STOP RELAY

FU0B4–01

INSPECTION

1. REMOVE ENGINE STOP RELAY

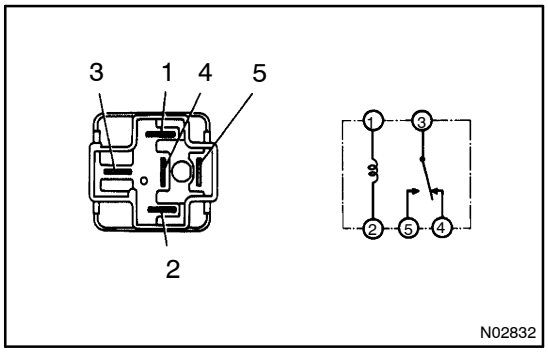

2. INSPECT ENGINE STOP RELAY CONTINUITY

(a) Using an ohmmeter, check that there is continuity between terminals 1 and 2 and 3 and 4.

If there is no continuity, replace the relay.

(b) Check that there is no continuity between terminals 3 and 5.

If there is continuity, replace the relay.

3. INSPECT ENGINE STOP RELAY OPERATION

(a) Apply battery voltage across terminals 1 and 2.

(b) Using an ohmmeter, check that there is continuity between terminals 3 and 5.

If there is no continuity, replace the relay.

4. REINSTALL ENGINE STOP RELAY