INTAKE AIR TEMPERATURE SENSOR


FU088–02

INSPECTION

1. REMOVE INTAKE AIR TEMPERATURE SENSOR

(a) Disconnect the sensor connector.

(b) Remove the intake air temperature sensor.

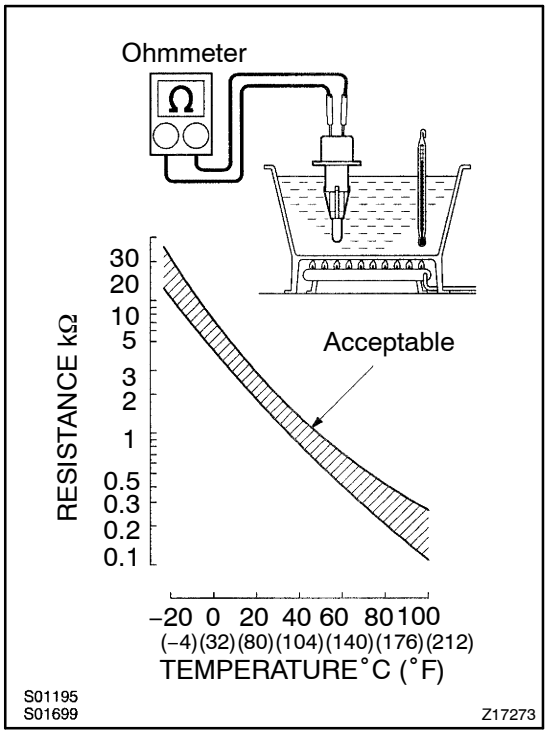

2. INSPECT INTAKE AIR TEMPERATURE SENSOR RESISTANCE

Using an ohmmeter, measure the resistance between terminals 1 (E2) and 2 (THA).

Resistance: Refer to the graph

If the resistance is not as specified, replace the intake air temperature sensor.

3. REINSTALL INTAKE AIR TEMPERATURE SENSOR