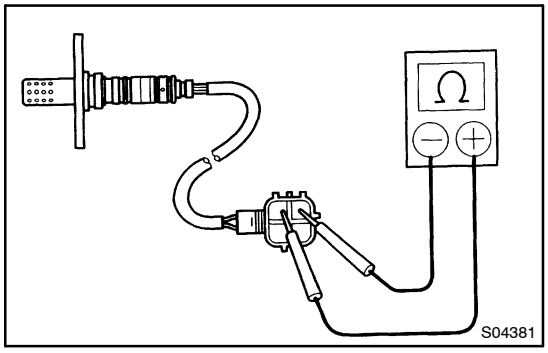


OXYGEN SENSOR

FU08B–02

INSPECTION

INSPECT HEATER RESISTANCE OF HEATED OXYGEN SENSOR

(a) Disconnect the oxygen sensor connector.

(b) Using an ohmmeter, measure the resistance between terminals +B and HT.

Resistance:

11.7 – 14.3 Ω at 20 °C (68 °F)

If the resistance is not as specified, replace the sensor.

(c) Reconnect the oxygen sensor connector.