

IG0LX–01

INSPECTION

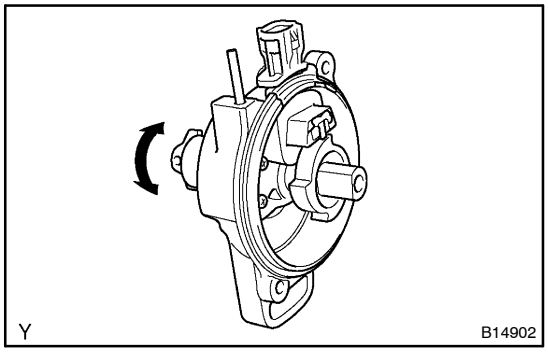

1. INSPECT DISTRIBUTOR SHAFT

Turn the distributor shaft and check that if it is worn or not.
If it feels rough or worn, replace the distributor.

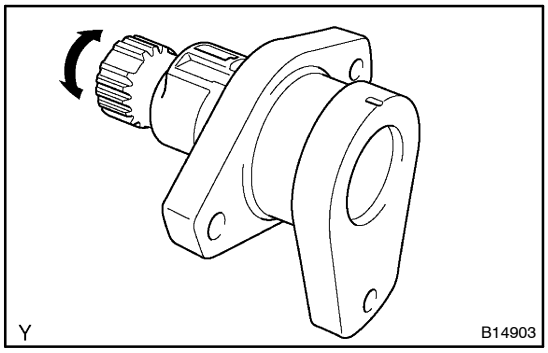

2. INSPECT DISTRIBUTOR HOUSING SHAFT

Turn the distributor housing shaft and check that if it is worn or not.
If it feels rough or worn, replace the distributor housing.