
LU0AL–02

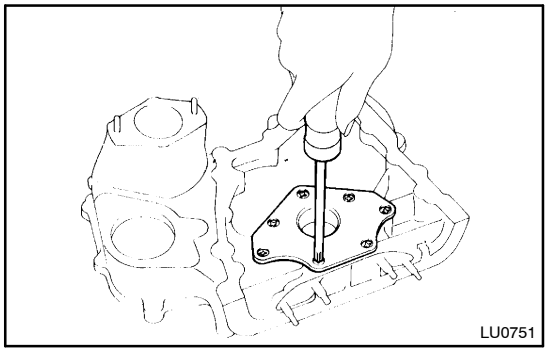

DISASSEMBLY

1. REMOVE RELIEF VALVE

Remove the plug, gasket, spring and relief valve.

2. REMOVE DRIVE AND DRIVEN ROTORS

(a) Remove the 7 screws and oil pump cover.

(b) Remove the rotors.