
LU0AR–02


REMOVAL

1. DRAIN ENGINE COOLANT
2. REMOVE OIL FILTER (See page LU–2)

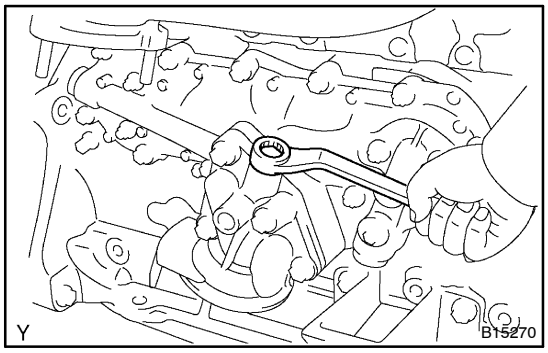


3. REMOVE RELIEF VALVE

Remove the plug, gasket, spring, relief valve and gasket.

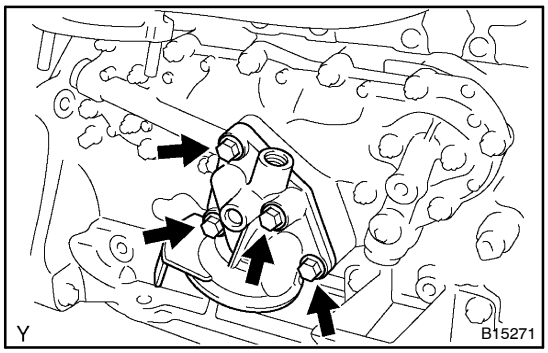


4. REMOVE OIL FILTER BRACKET

Remove the 4 bolts, bracket and gasket.

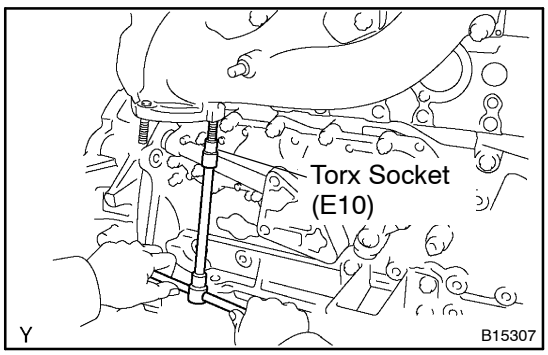

5. REMOVE STUD BOLT FOR EXHAUST MANIFOLD

Using a torx socket (E10), remove the stud bolt.

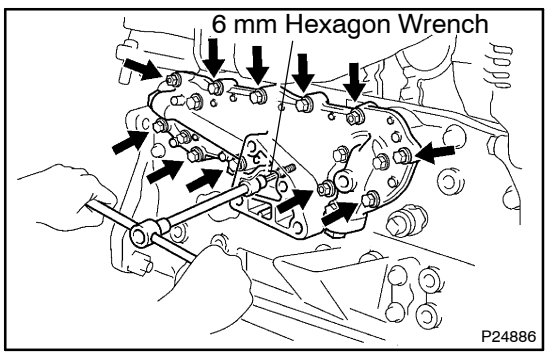

6. REMOVE OIL COOLER AND COVER ASSEMBLY

(a) Using a 6 mm hexagon wrench, remove the bolt and washer.

(b) Remove the 8 bolts, 3 nuts, the oil cooler, cover assembly and gasket.

7. REMOVE OIL COOLER FORM OIL COOLER COVER

Remove the 4 nuts, oil cooler and gasket.