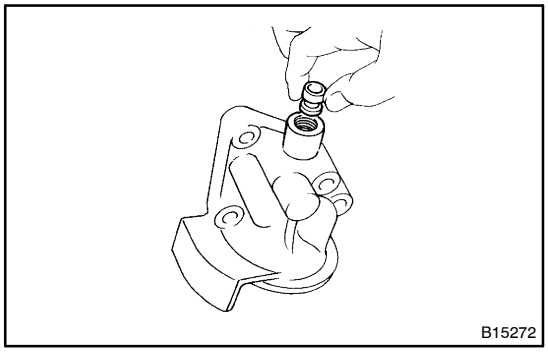
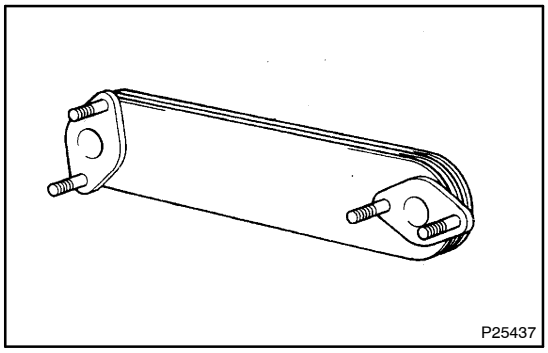
LU0AS–02


B15272

INSPECTION

1. INSPECT RELIEF VALVE

Coat the valve with engine oil and check that it falls smoothly into the valve hole by its own weigh.
If is not, replace the relief valve. If necessary, replace the oil filter bracket.


P25437

2. INSPECT OIL COOLER

Check the oil cooler for damage or clogging.
If necessary, replace the oil cooler.