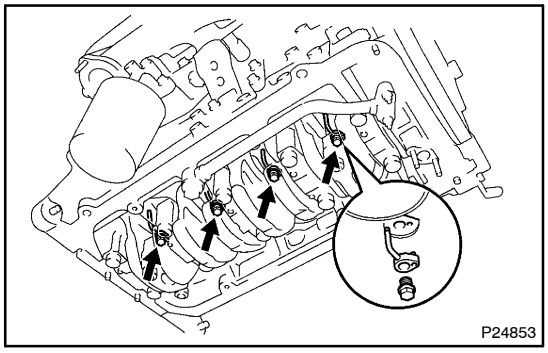


LU0B1–02

INSTALLATION

1. INSTALL OIL NOZZLES AND CHECK VALVES

(a) Align the pin of the oil nozzle with the pin hole of the cylinder block.

(b) Install the oil nozzle with the check valve. Install the 4 oil nozzles and 4 check valves.

Torque: 30 N·m (306 kgf·cm, 22 ft·lbf)

2. INSTALL OIL PAN (See page LU–14)

3. FILL WITH ENGINE OIL

4. START ENGINE AND CHECK FOR OIL LEAKS

5. RECHECK ENGINE OIL LEVEL