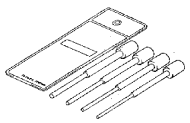

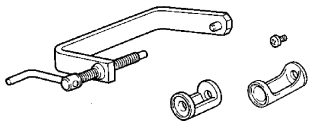



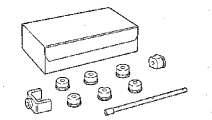











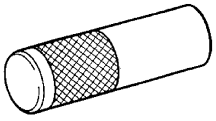






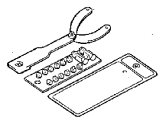
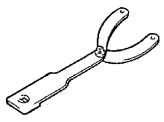

ENGINE MECHANICAL

PP3V5–01

SST (Special Service Tools)

	09201–10000	Valve Guide Bushing Remover & Replacer Set	
	(09201–01070)	Valve Guide Bushing Remover & Replacer 7	
	09202–70020	Valve Spring Compressor	
	(09202–00010)	Attachment	
	09213–58013	Crankshaft Pully Holding Tool	
	(90105–08076)	Bolt	
	09215–00013	Crankshaft Bearing Remover & Replacer Set ”B”	
	(09215–00021)	Gate ”B”	
	(09215–00441)	Camshaft Bearing Remover & Replacer	
	(09215–00471)	Camshaft Bearing Remover & Replacer	
	09215–00101	Camshaft Bearing Remover & Replacer Set ”A”	
	(09215–00130)	Bolt	

	(09215–00141)	Nut	
	(09215–00150)	Shaft "A"	
	(09215–00161)	Pin	
	(09215–00211)	Remover & Replacer	
	09222–58012	Connecting Rod Bushing Remover & Replacer	
	(09222–01022)	Remover & Replacer	
	(09222–01031)	Guide	
	(09222–01041)	Base	
	09223–46011	Crankshaft Front Oil Seal Replacer	Camshaft oil seal
	09223–56010	Crankshaft Rear Oil Seal Replacer	
	09308–10010	Oil Seal Puller	Crankshaft front oil seal
	09330–00021	Companion Flange Holding Tool	Crankshaft pulley
	09608–06041	Front Hub Inner Bearing Cone Replacer	Crankshaft pulley Crankshaft timing gear

	09843–18020	Diagnosis Check Wire	
	09950–50013	Puller C Set	
	(09951–05010)	Hanger 150	Crankshaft pulley Crankshaft timing gear
	(09952–05010)	Slide Arm	Crankshaft pulley Crankshaft timing gear
	(09953–05010)	Center Bolt 100	Crankshaft pulley Crankshaft timing gear
	(09953–05020)	Center Bolt 150	Crankshaft pulley Crankshaft timing gear
	(09954–05031)	Claw No.3	Crankshaft pulley Crankshaft timing gear
	09950–70010	Handle Set	
	(09951–07100)	Handle 100	Valve guide bushing
	09960–10010	Variable Pin Wrench Set	
	(09962–01000)	Variable Pin Wrench Arm Assy	Camshaft timing gear Idle gear
	(09963–00500)	Pin 5	Idle gear
	(09963–01000)	Pin 10	Camshaft timing gear