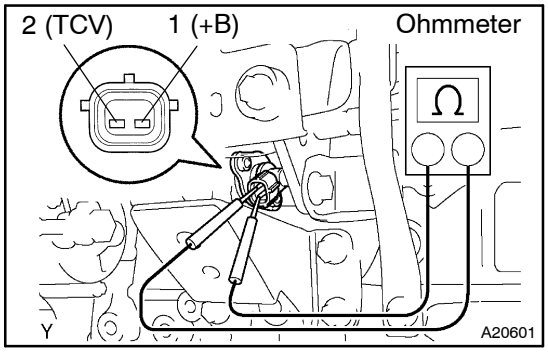


TIMING CONTROL VALVE

ED02T–03

INSPECTION

INSPECT TIMING CONTROL VALVE

(a) Disconnect the valve connector.

(b) Using an ohmmeter, measure the resistance between the terminals.

Resistance:

Tester connection	Specified condition
1 (+B) – 2 (TCV)	40 – 50 Ω at 20°C (68°F)
2 (TCV) – Body ground	10 MΩ or more

If the resistance is not specified, replace the injection pump assembly (See page FU–7).

(c) Reconnect the valve connector.