
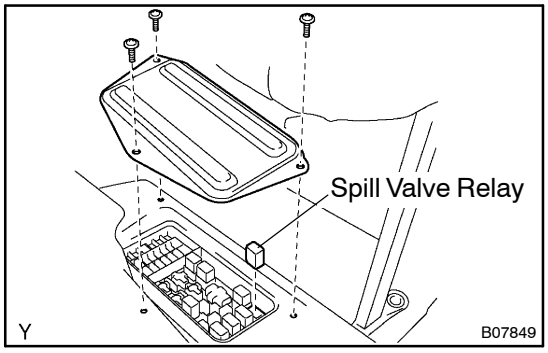


SPILL CONTROL VALVE RELAY

ED02W–03

INSPECTION

1. REMOVE SPILL CONTROL VALVE RELAY

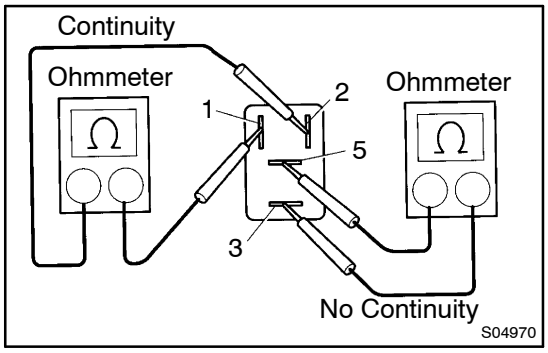

2. INSPECT SPILL CONTROL VALVE RELAY


(a) Inspect the relay continuity.

(1) Using an ohmmeter, check that there is continuity between terminals 1 and 2.

If there is no continuity, replace the relay.

(2) Check that there is no continuity between terminals 3 and 5.

If there is continuity, replace the relay.

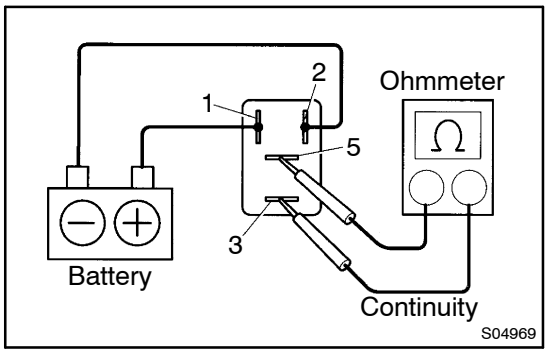

(b) Inspect the relay operation.

(1) Apply battery positive voltage across terminals 1 and 2.

(2) Using an ohmmeter, check that there is continuity between terminals 3 and 5.

If there is no continuity, replace the relay.

3. REINSTALL SPILL CONTROL VALVE RELAY