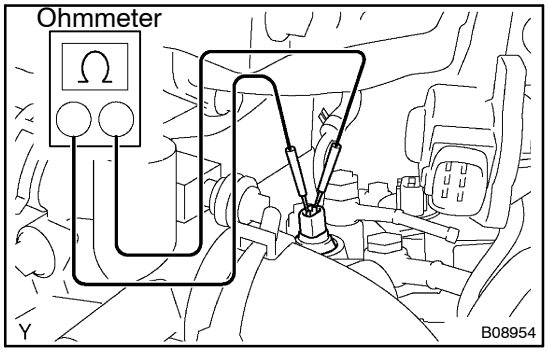


ENGINE SPEED SENSOR

ED03F–06

INSPECTION

INSPECT ENGINE SPEED SENSOR

(a) Disconnect the sensor connector.

(b) Using an ohmmeter, measure the resistance between the terminals.

Resistance: 1 – 3 Ω at 20˚C (68˚F)

If the resistance is not specified, replace the injection pump assembly (See page FU–7).

(c) Reconnect the sensor connector.