
FIRST GEAR POSITION SWITCH

ED05K–02

INSPECTION

INSPECT FIRST GEAR POSITION SWITCH

(a) Disconnect the switch connector.

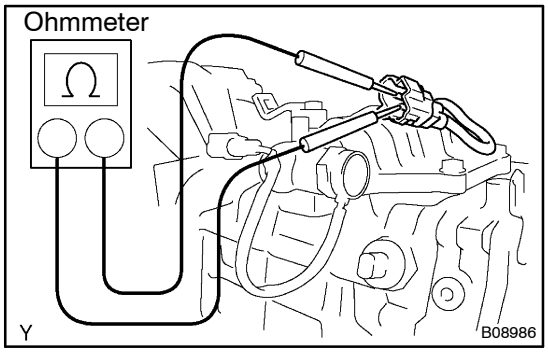

(b) Using an ohmmeter, check the continuity between the terminals.

Continuity:

Transmission Shift Position	Continuity
1	Continuity
Others	No continuity

If continuity is not as specified, replace the switch. (See page ED–28)

(c) Reconnect the switch connector.