
ED05L–02

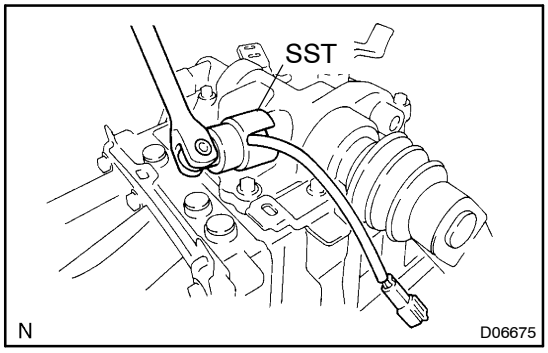

REPLACEMENT

1. REMOVE TRANSMISSION

2. REMOVE FIRST GEAR POSITION SWITCH

Using SST, remove the switch and gasket.

SST 09817–16011

3. REINSTALL NEW FIRST GEAR POSITION SWITCH

(a) Install a new gasket to a new switch.

(b) Using SST, install the switch.

Torque: 44.1 N·m (450 kgf·cm, 33 ft·lbf)

SST 09817–16011

4. REINSTALL TRANSMISSION