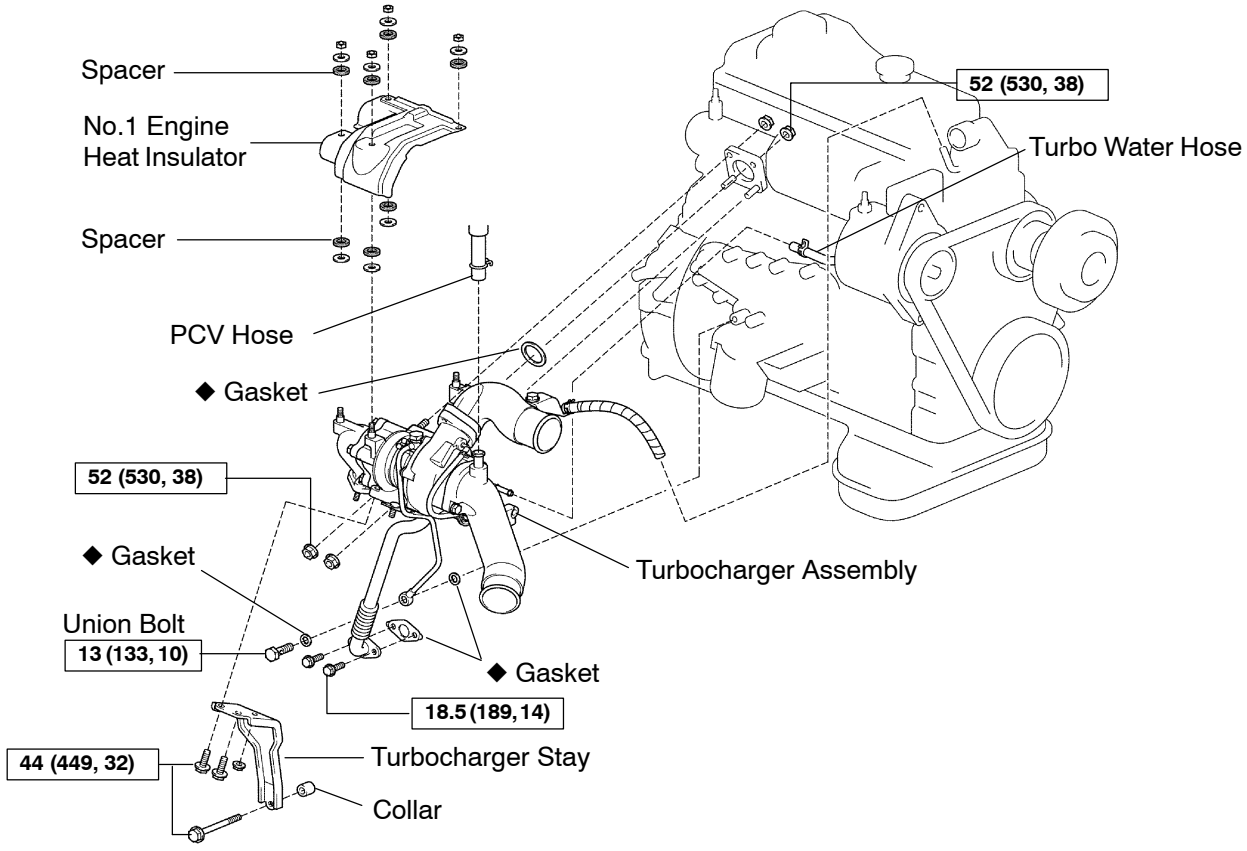
CYLINDER HEAD

COMPONENTS

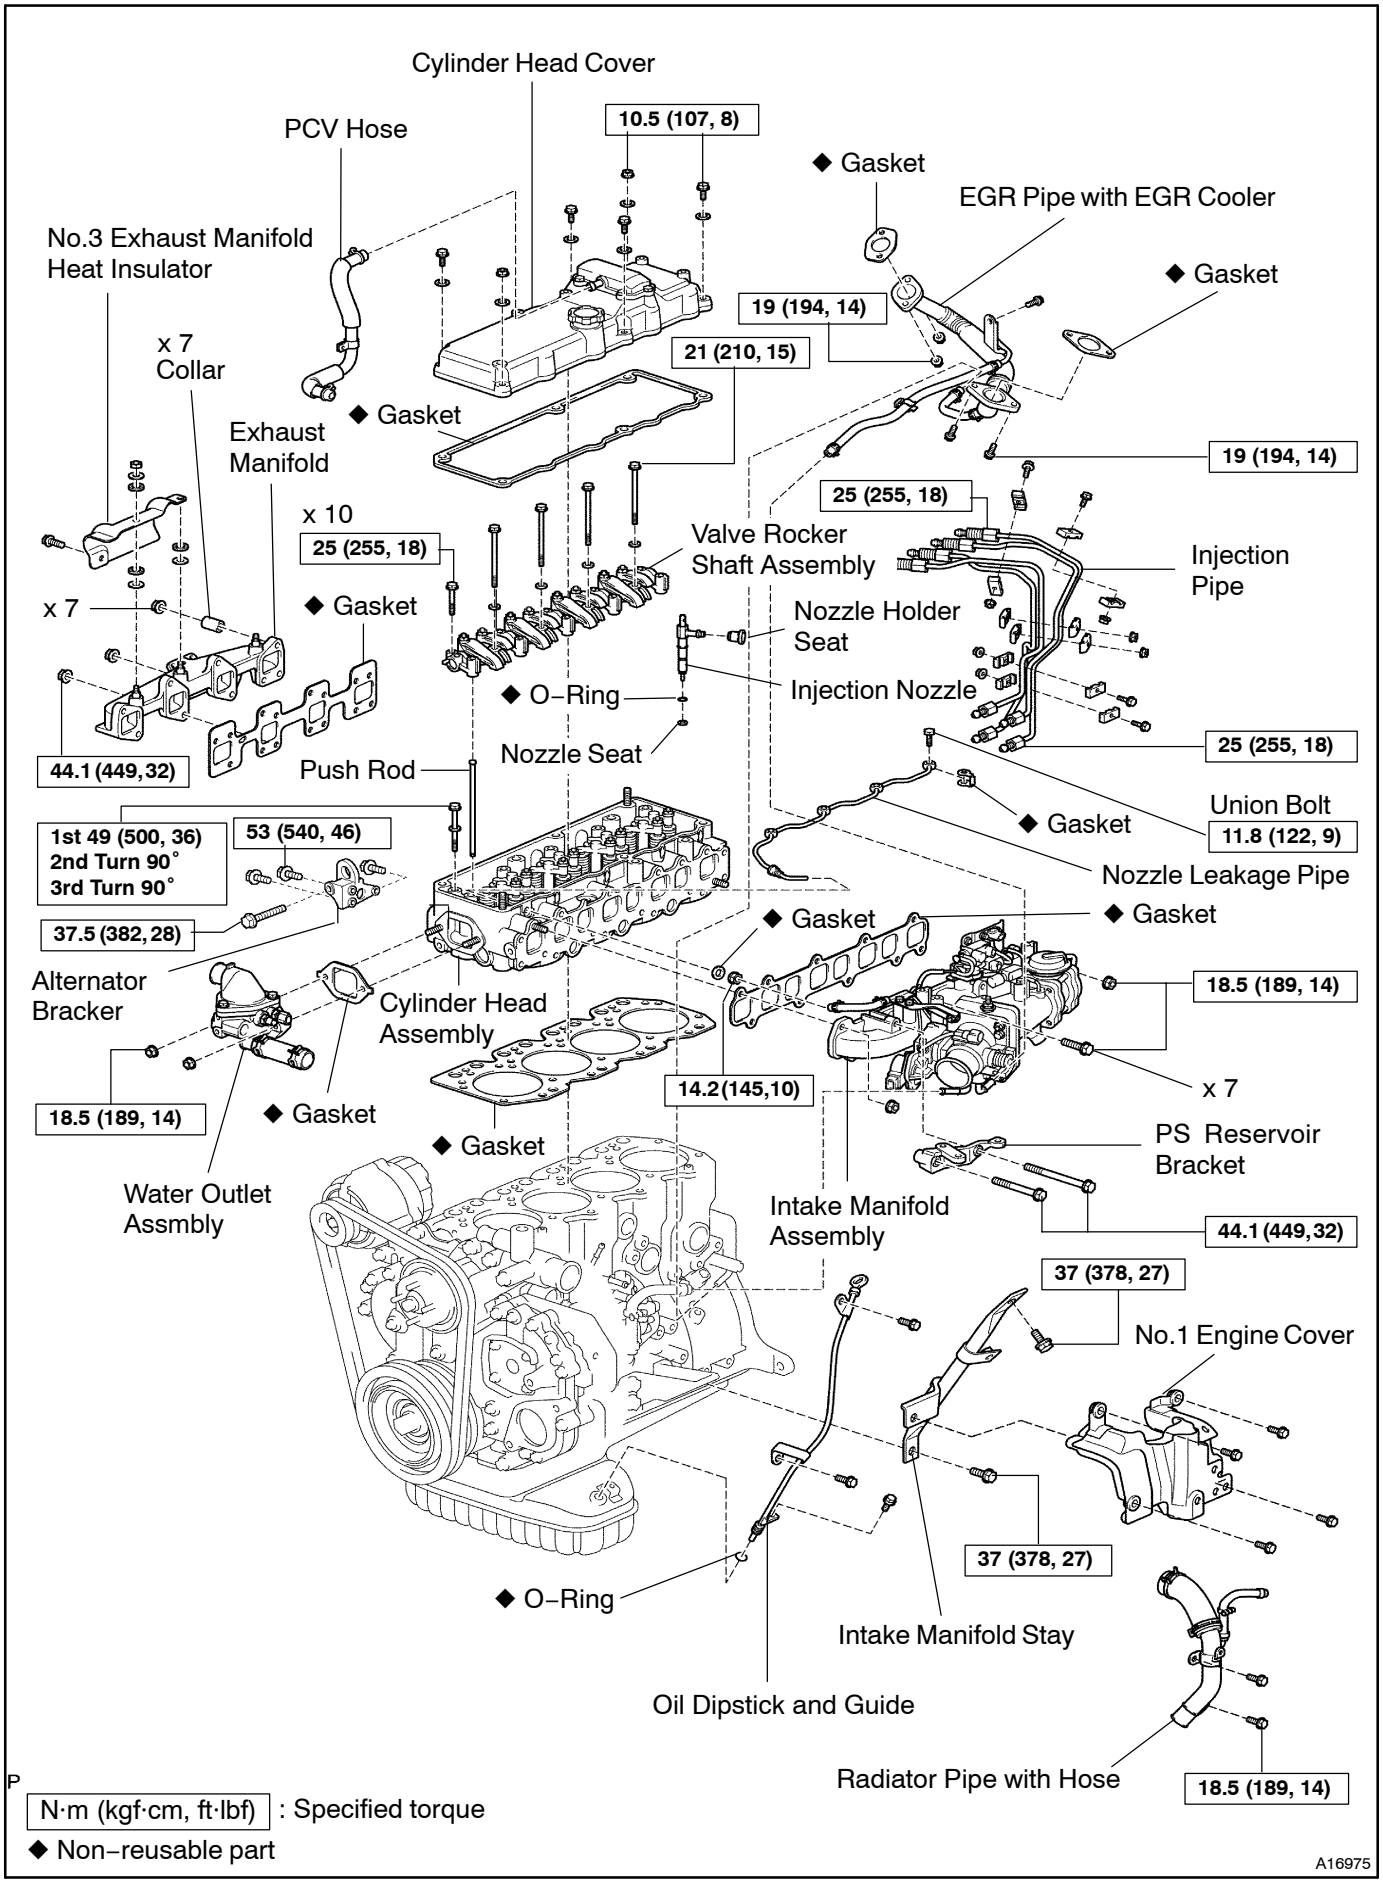
EM1RV–02

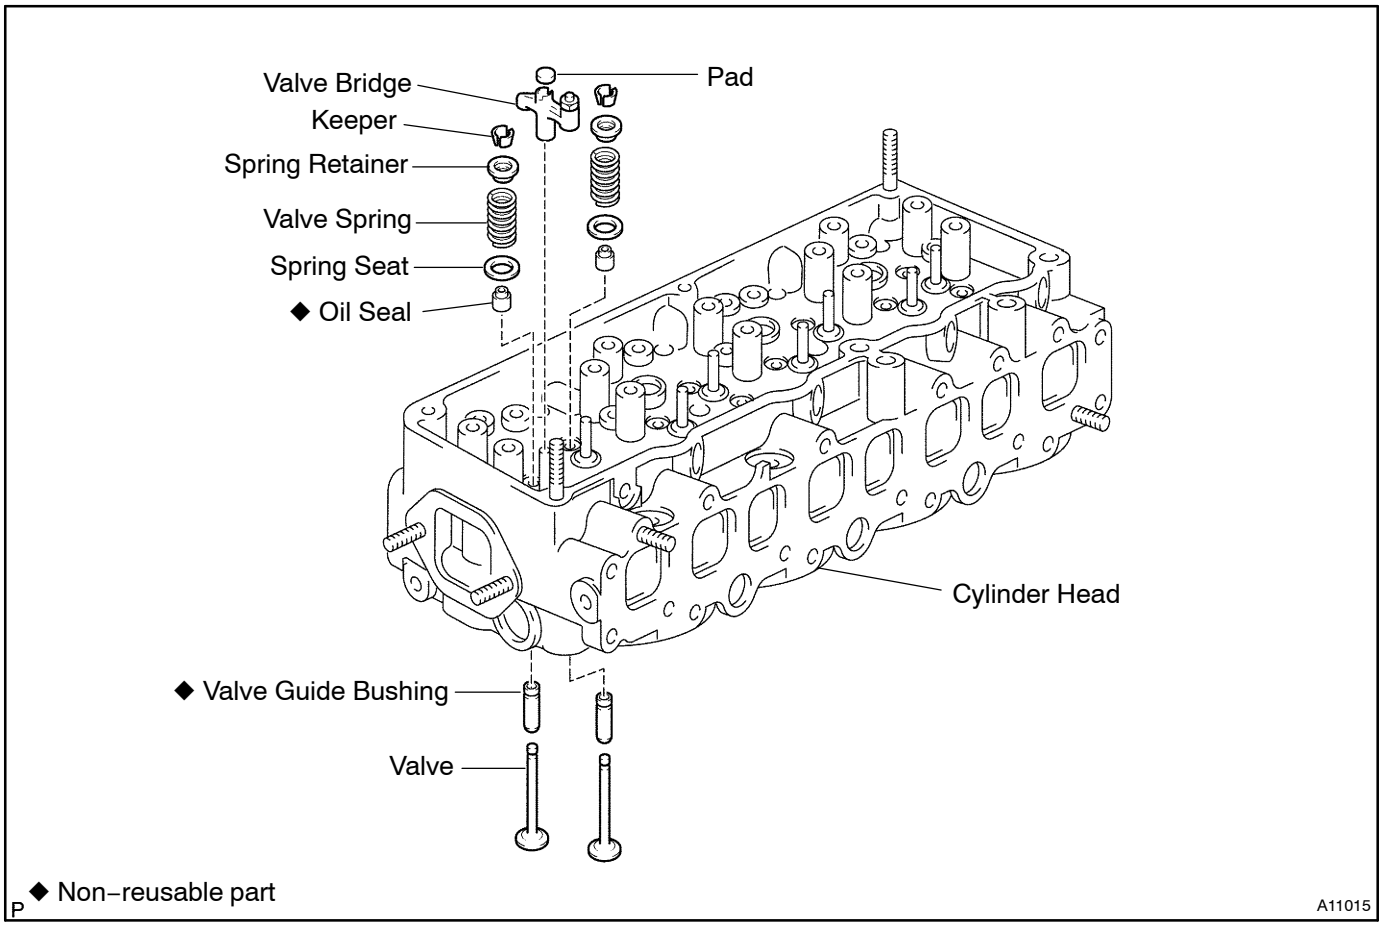


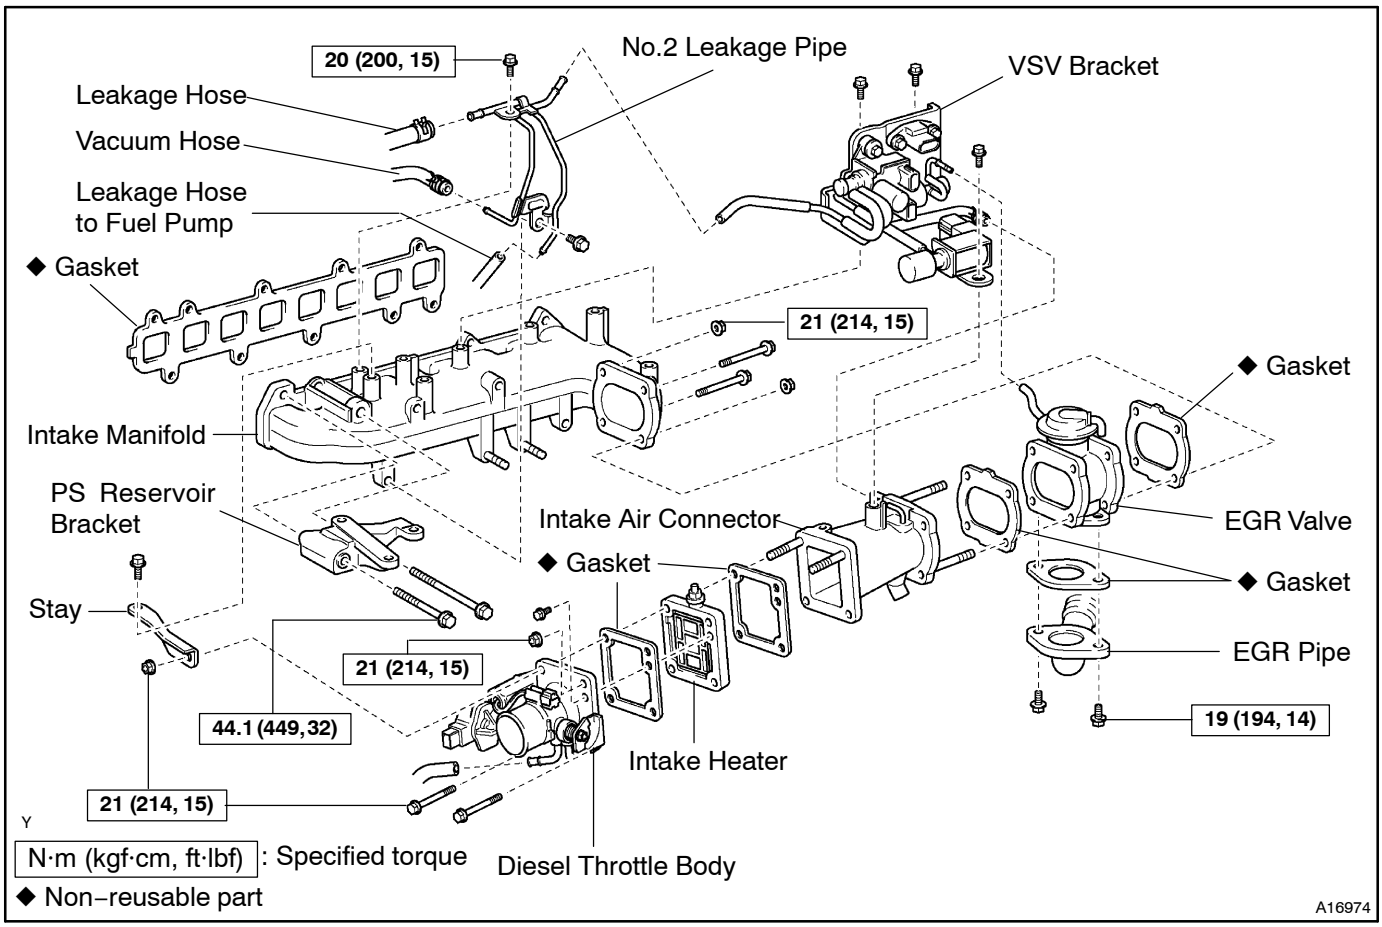
N·m (kgf·cm, ft·lbf) : Specified torque

◆ Non–reusable part

A16973


Cylinder Head Cover
PCV Hose
10.5 (107, 8)
◆ Gasket
EGR Pipe with EGR Cooler
No.3 Exhaust Manifold Heat Insulator
◆ Gasket
19 (194, 14)
x 7
Collar
21 (210, 15)
◆ Gasket
Exhaust Manifold
19 (194, 14)
25 (255, 18)
x 10
25 (255, 18)
Valve Rocker Shaft Assembly
Injection Pipe
x 7
◆ Gasket
Nozzle Holder Seat
◆ O–Ring
Injection Nozzle
Nozzle Seat
25 (255, 18)
44.1 (449, 32)
Push Rod
Union Bolt
◆ Gasket
11.8 (122, 9)
Nozzle Leakage Pipe
1st 49 (500, 36)
2nd Turn 90°
3rd Turn 90°
53 (540, 46)
◆ Gasket
◆ Gasket
37.5 (382, 28)
Alternator Bracker
Cylinder Head Assembly
18.5 (189, 14)
14.2 (145, 10)
x 7
18.5 (189, 14)
◆ Gasket
◆ Gasket
PS Reservoir Bracket
Water Outlet Assmbly
Intake Manifold Assembly
44.1 (449, 32)
37 (378, 27)
No.1 Engine Cover
37 (378, 27)
◆ O–Ring
Intake Manifold Stay
Oil Dipstick and Guide
Radiator Pipe with Hose
18.5 (189, 14)
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
A16975


Valve Bridge
Pad
Keeper
Spring Retainer
Valve Spring
Spring Seat
◆ Oil Seal
Cylinder Head
◆ Valve Guide Bushing
Valve
◆ Non–reusable part
A11015


20 (200, 15)
No.2 Leakage Pipe
VSV Bracket
Leakage Hose
Vacuum Hose
Leakage Hose to Fuel Pump
◆ Gasket
21 (214, 15)
◆ Gasket
Intake Manifold
PS Reservoir Bracket
Intake Air Connector
EGR Valve
◆ Gasket
◆ Gasket
Stay
21 (214, 15)
EGR Pipe
44.1 (449, 32)
19 (194, 14)
Intake Heater
21 (214, 15)
N·m (kgf·cm, ft·lbf) : Specified torque
Diesel Throttle Body
◆ Non–reusable part
A16974