

INJECTION PUMP

COMPONENTS

FU06L–04

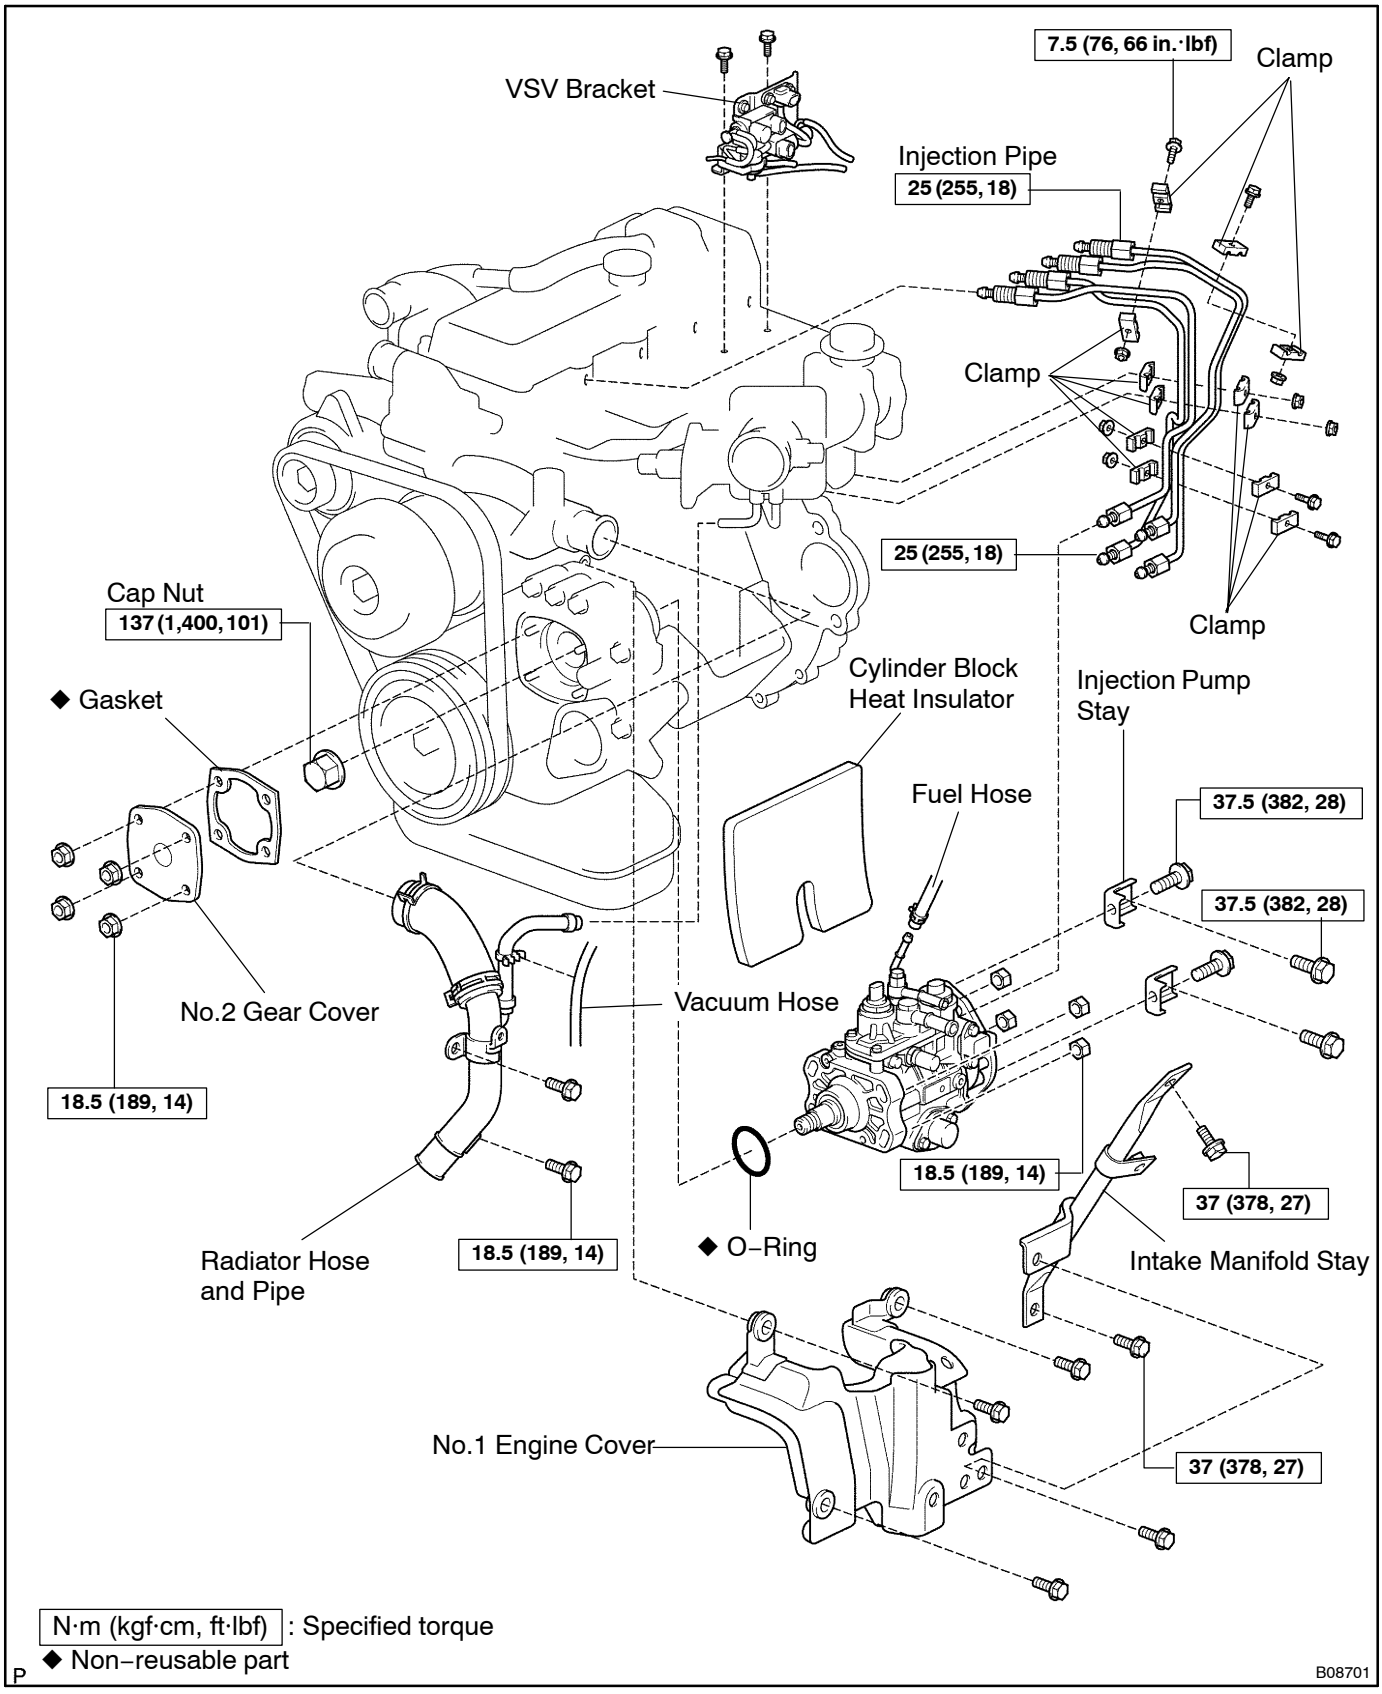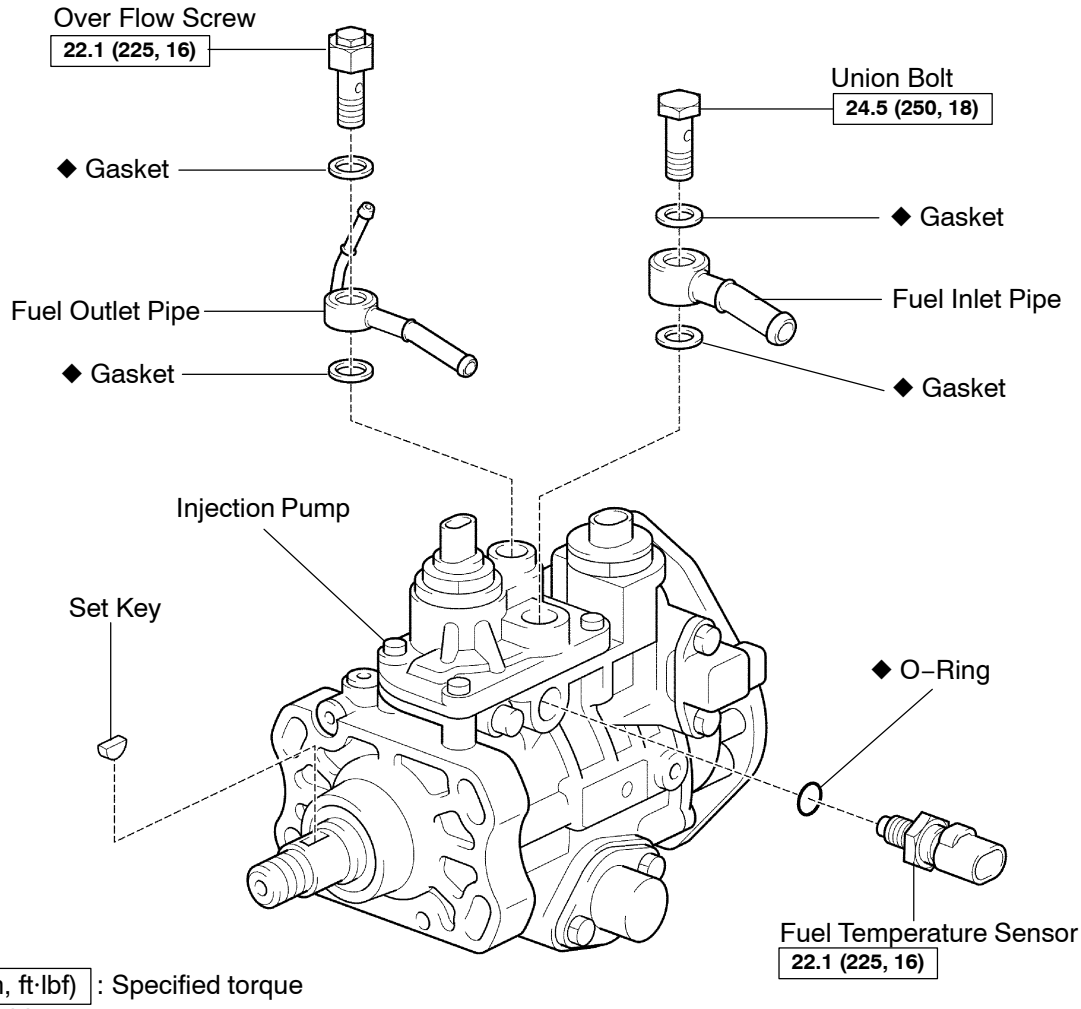


Over Flow Screw
22.1 (225, 16)
◆ Gasket
Fuel Outlet Pipe
◆ Gasket
Union Bolt
24.5 (250, 18)
◆ Gasket
Fuel Inlet Pipe
◆ Gasket
Injection Pump
Set Key
◆ O–Ring
Fuel Temperature Sensor
22.1 (225, 16)
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non-reusable part
B08704