
FU06M–03

REMOVAL


REMOVE INJECTION PUMP

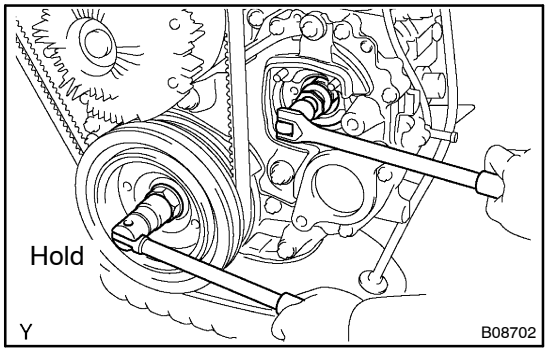

(a) Hold the crankshaft pulley, and remove the injection pump drive gear nut.

(b) Remove the 2 injection pump stay with the 4 bolts

(c) Remove the 4 nuts holding the injection pump to the timing gear case.

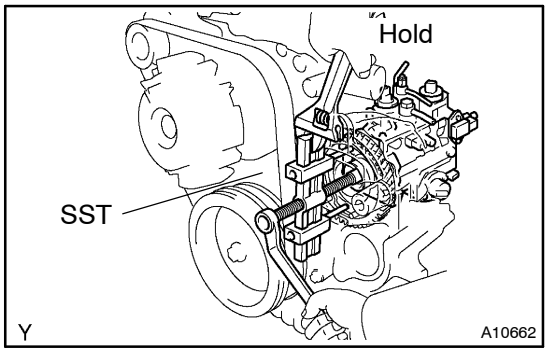

(d) Using SST, remove the injection pump.
SST 09950–50013 (09951–05010, 09952–05010, 09953–05020, 09954–05021)