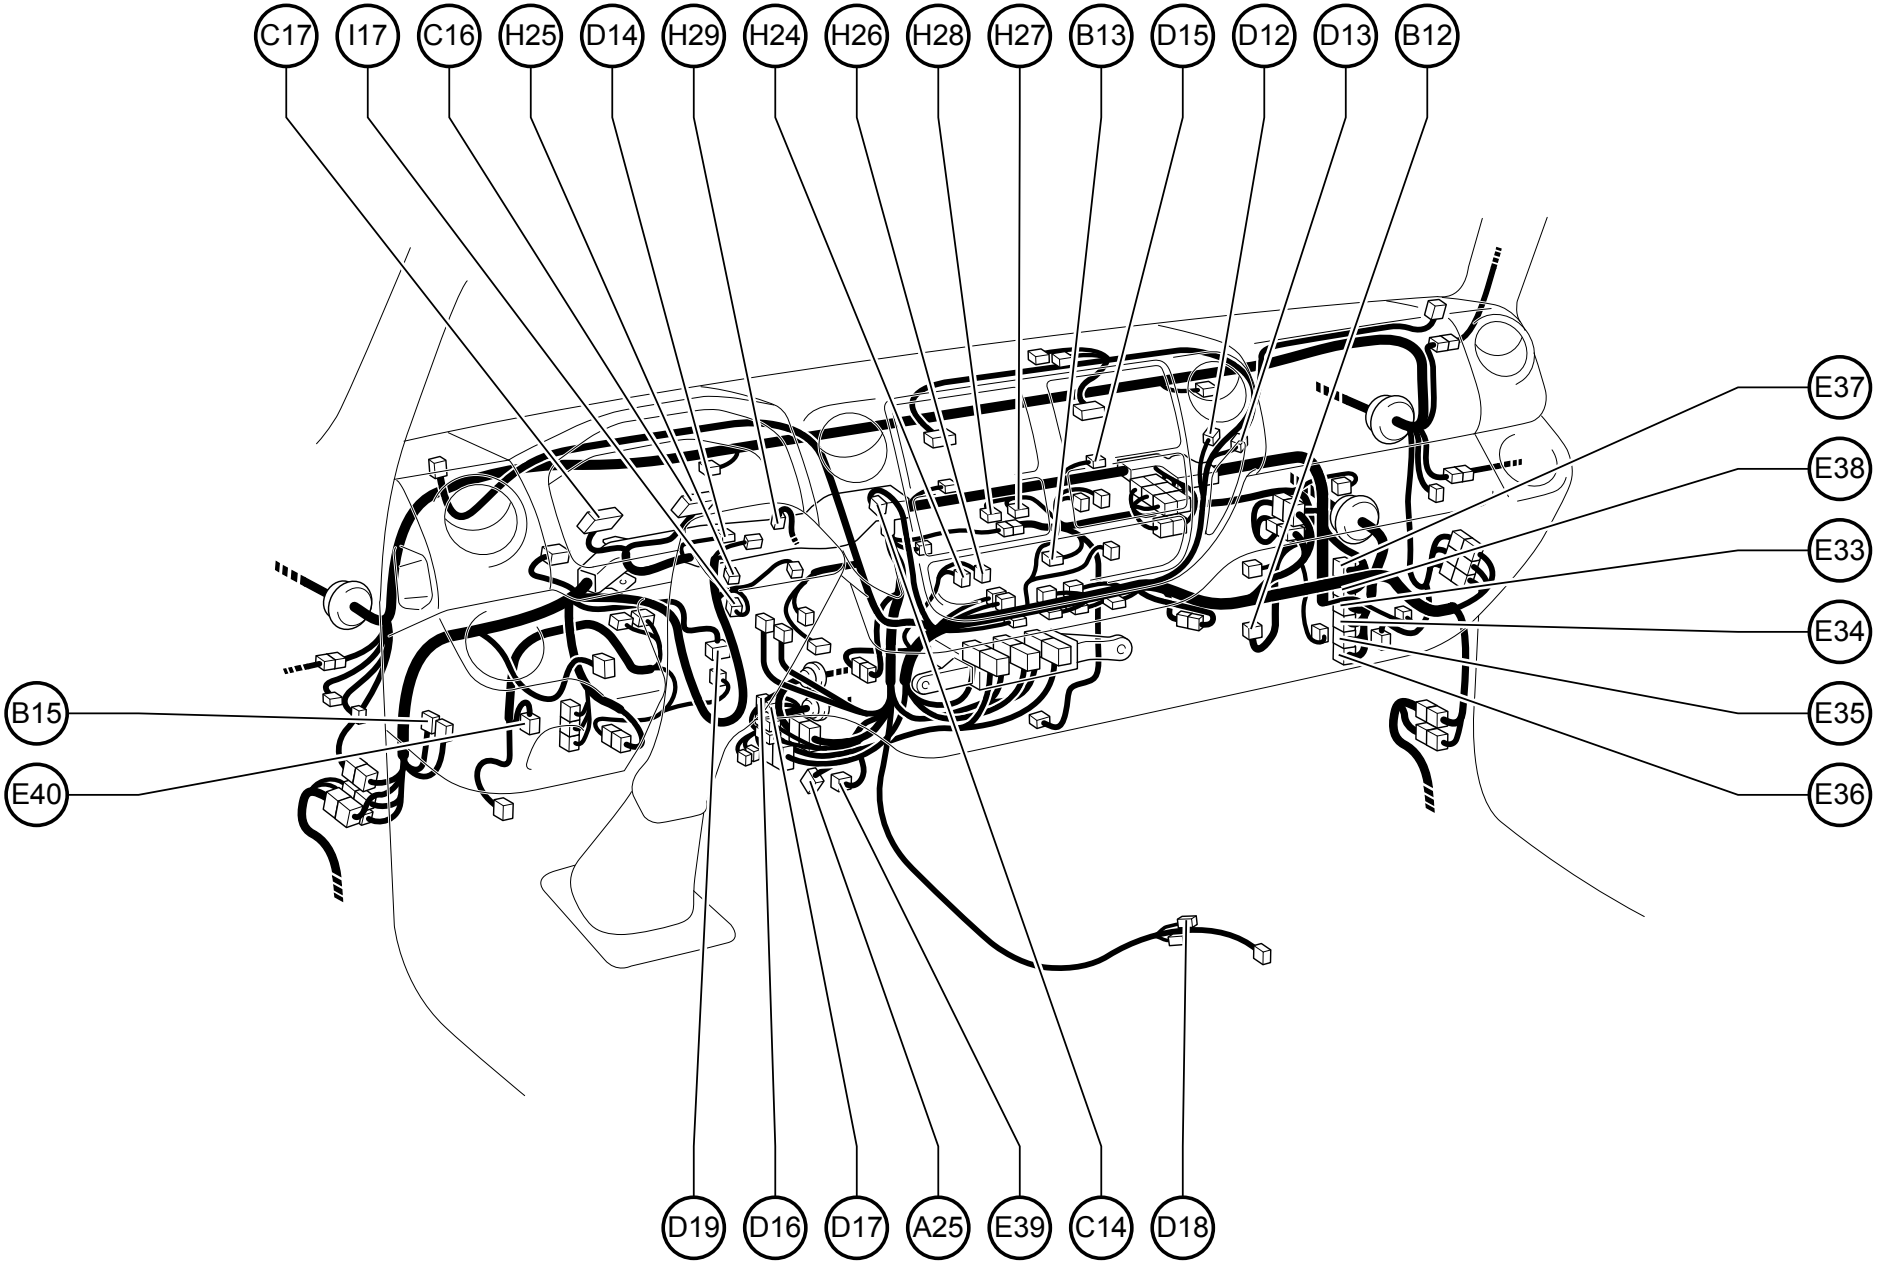

C17
I17
C16
H25
D14
H29
H24
H26
H28
H27
B13
D15
D12
D13
B12
E37
E38
E33
E34
E35
E36
B15
E40
D19
D16
D17
A25
E39
C14
D18

A 25 Accelerator Position Sensor (Accelerator Pedal Assembly)

B 12 Blower Resistor
B 13 Blower with Fan Motor Sub-Assy
B 15 Brake Fluid Level Warning Switch (Parking Brake Switch Assembly)

C 14 Cigarette Lighter Assembly
C 16 Combination Meter Assembly
C 17 Combination Meter Assembly


D 12 Diode (Door Courtesy Light Switch Assembly (Driver' s Side))
D 13 Diode (Door Courtesy Light Switch Assembly RH)
D 14 Diode (Exhaust Retarder Switch Assembly)
D 15 Diode (Front Air Conditioner)
D 16 Diode (Rear Combination Light Assembly)
D 17 Diode (Rear Combination Light Assembly)
D 18 Diode (Transmission Control ECU Assembly)
D 19 DLC3

E 33 ECM
E 34 ECM
E 35 ECM
E 36 ECM
E 37 ECM
E 38 ECM
E 39 Exhaust Brake Accelerator Pedal Switch (Exhaust Retarder Switch Assembly)
E 40 Exhaust Brake Clutch Switch (Exhaust Retarder Switch Assembly)


H 24 Hazard Warning Signal Switch Assembly
H 25 Headlight Dimmer Switch Assembly
H 26 Headlight Leveling Switch
H 27 Heater Control & Accessory Assembly
H 28 Heater Control & Accessory Assembly
H 29 Spiral Cable Sub-Assembly , Horn Contact Plate

I 17 Ignition or Starter Switch Assembly


A 25
Black

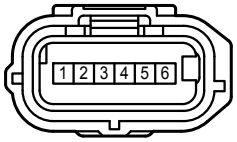


B 12
Black

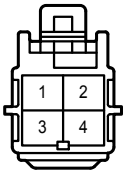

B 13
Black

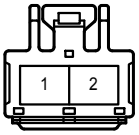


B 15
White

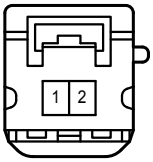


C 14
White



C 16
White

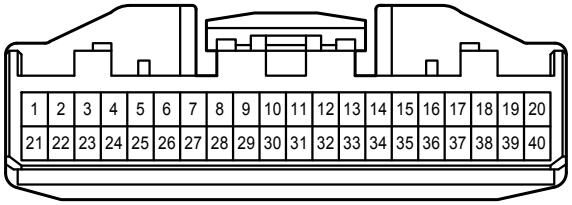

C 17
White

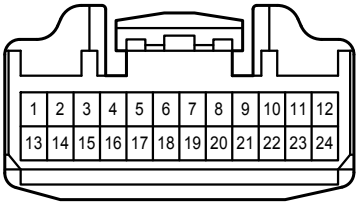

D 12
White



D 13
White



D 14
Black



D 15
White



D 16
White




D 17
White




D 18
Black




D 19
Black

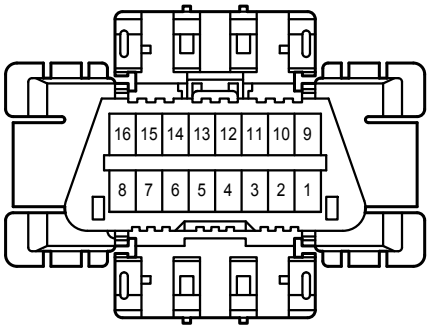


E 33
White

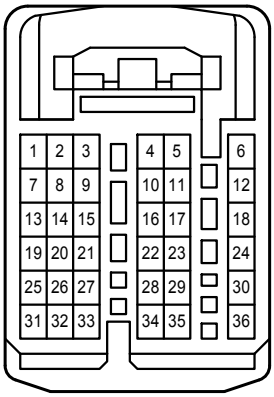


E 34
White

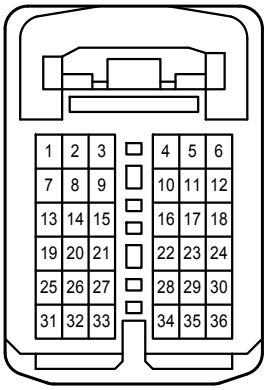


E 35
White

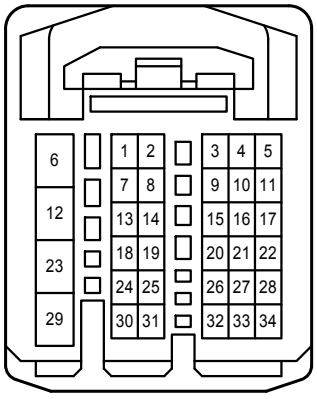


E 36
White

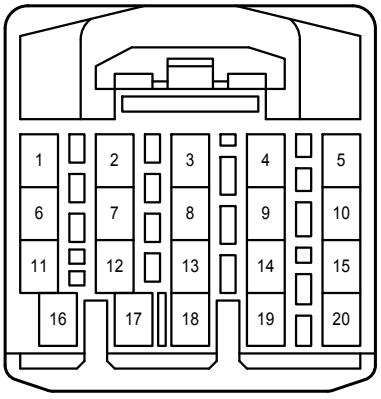


E 37
White

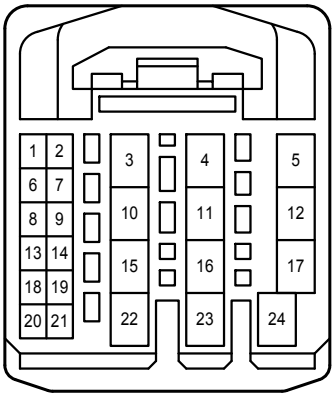


E 38
White

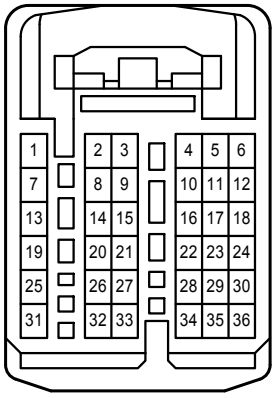


E 39
White




E 40
White

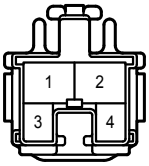


H 24
Black

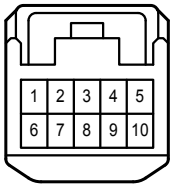


H 25
Black

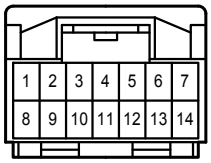


H 26
Black




H 27
Black

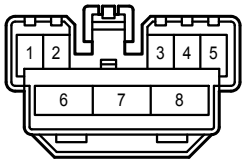

H 28
Green

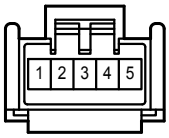

H 29
White



I 17
White

