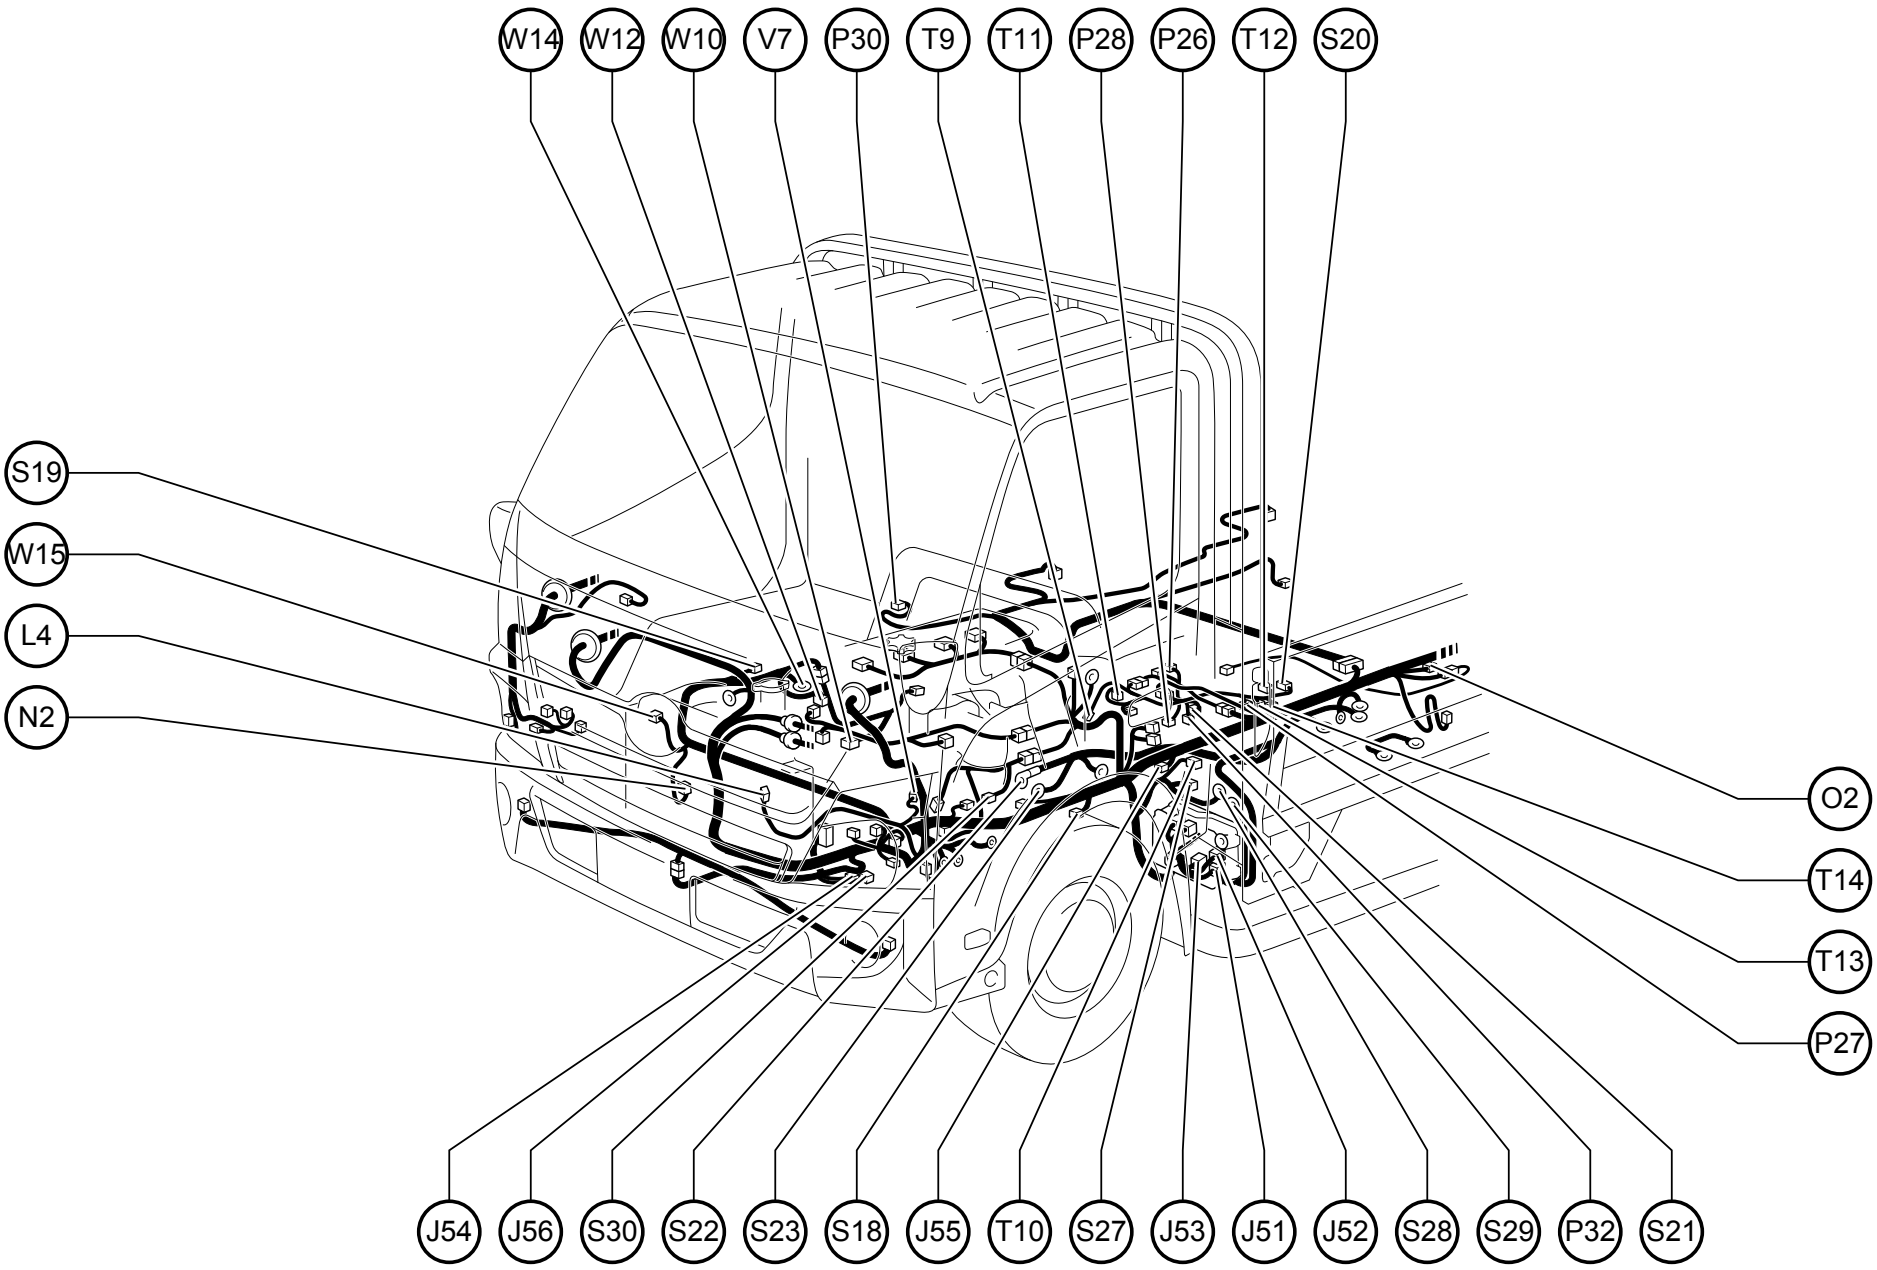

W14
W12
W10
V7
P30
T9
T11
P28
P26
T12
S20
S19
W15
L4
N2
O2
T14
T13
P27
J54
J56
S30
S22
S23
S18
J55
T10
S27
J53
J51
J52
S28
S29
P32
S21

J 51 Junction Connector
J 52 Junction Connector
J 53 Junction Connector
J 54 Junction Connector
J 55 Junction Connector
J 56 Junction Connector

L 4 Low Pitched Horn Assembly

N 2 No. 1 Pressure Switch

O 2 Option Connector (Power Outlet4)

P 26 Park/Neutral Position Switch Assembly
P 27 Park/Neutral Position Switch Assembly
P 28 Power Take-Off Assembly
P 30 Power Take-Off Solenoid Assembly
P 32 PTO Position Switch (Power Take-Off Indicator Switch Assembly)


S 18 Front Speed Sensor LH
S 19 Front Speed Sensor RH
S 20 Speedometer Sensor
S 21 Speedometer Sensor
S 22 Starter Assembly
S 23 Starter Assembly
S 27 Starter Relay Assembly
S 28 Starter Relay Assembly
S 29 Starter Relay Assembly
S 30 Suction Control Valve (Injection or Supply Pump Assembly)

T 9 Temperature Sensor
T 10 Tilt Cab Control Switch
T 11 Transmission Revolution Sensor (Input)
T 12 Transmission Revolution Sensor (Output)
T 13 Transmission To Solenoid Wire
T 14 Transmission To Solenoid Wire


V 7 Vacuum Warning Switch Assembly

W 10 With Magnet Clutch Compressor Assembly
W 12 With Regulator Generator Assembly
W 14 With Regulator Generator Assembly
W 15 With Shroud Blower Assembly


J 51
White

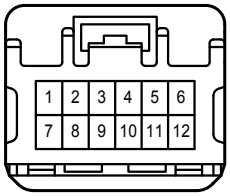


J 52
Black

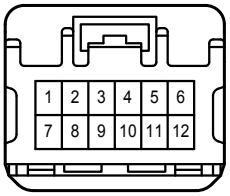


J 53
Gray

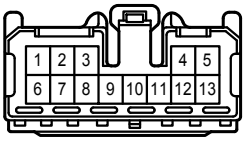


J 54
Gray

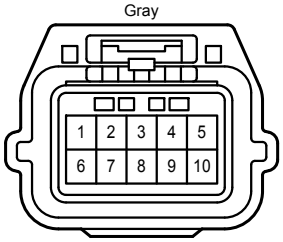


J 55
Gray

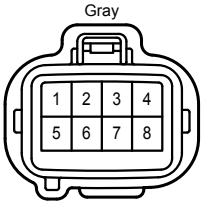


J 56
Black

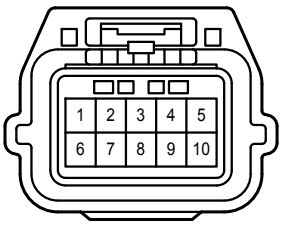


L 4
Black



N 2
Gray

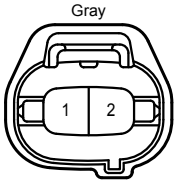


O 2
Gray

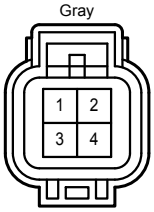


P 26
Gray




P 27
Black

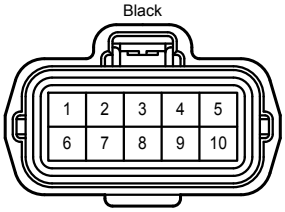


P 28
Gray

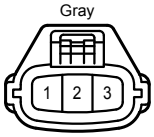

P 30
Black

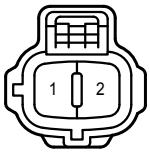

P 32
Gray

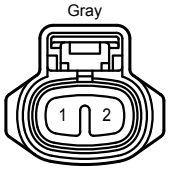

S 18
Gray




S 19
Gray




S 20
Black




S 21
Gray

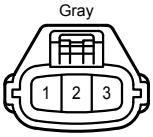

S 22
White




S 23




S 27
Black



S 28




S 29



S 30
Gray



T 9
White

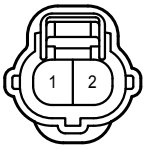

T 10
Black




T 11
Black




T 12
Black



T 13
Gray

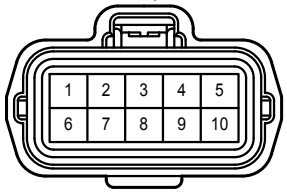

T 14
Gray

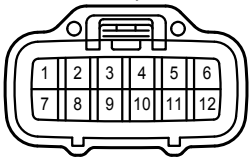


V 7
Black




W 10
Gray



W 12
Black

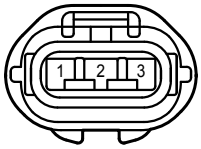

W 14
White



W 15
Gray

