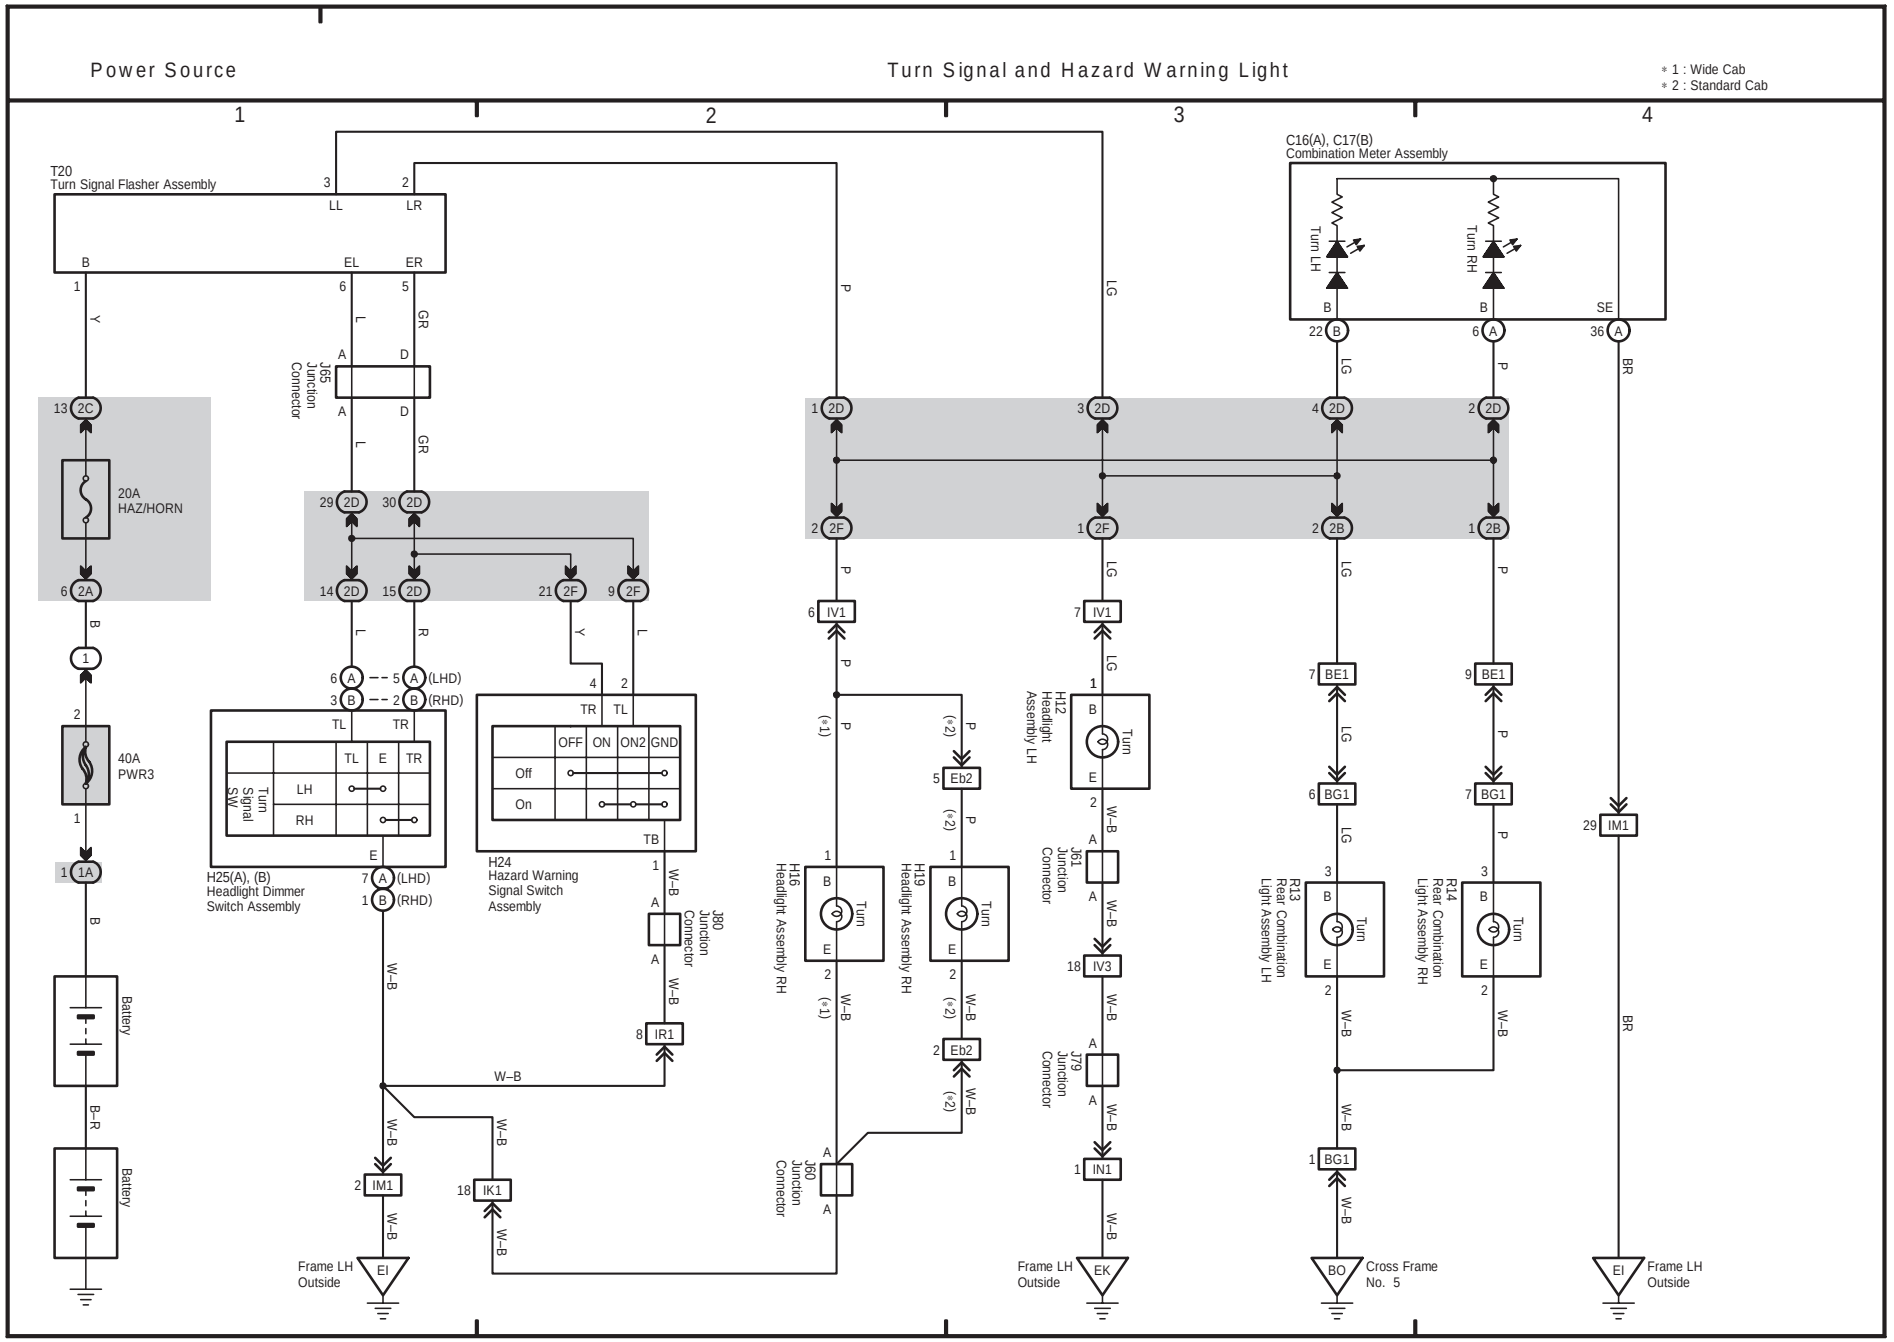

Power Source
Turn Signal and Hazard Warning Light
* 1 : Wide Cab
* 2 : Standard Cab
1
2
3
4
T20
Turn Signal Flasher Assembly
LL
LR
B
EL
ER
J65
Junction
Connector
20A
HAZ/HORN
40A
PWR3
Battery
Battery
H25(A), (B)
Headlight Dimmer
Switch Assembly
Turn
Signal
SW
LH
RH
(LHD)
(RHD)
H24
Hazard Warning
Signal Switch
Assembly
OFF
ON
ON2
GND
Off
On
TR
TL
TB
J80
Junction
Connector
IR1
IM1
IK1
Frame LH
Outside
EI
H16
Headlight Assembly RH
H19
Headlight Assembly RH
J60
Junction
Connector
Eb2
H12
Headlight
Assembly LH
J61
Junction
Connector
IV3
J79
Junction
Connector
IN1
EK
C16(A), C17(B)
Combination Meter Assembly
Turn LH
Turn RH
SE
R13
Rear Combination
Light Assembly LH
R14
Rear Combination
Light Assembly RH
BG1
BE1
BO
Cross Frame
No. 5
Frame LH
Outside