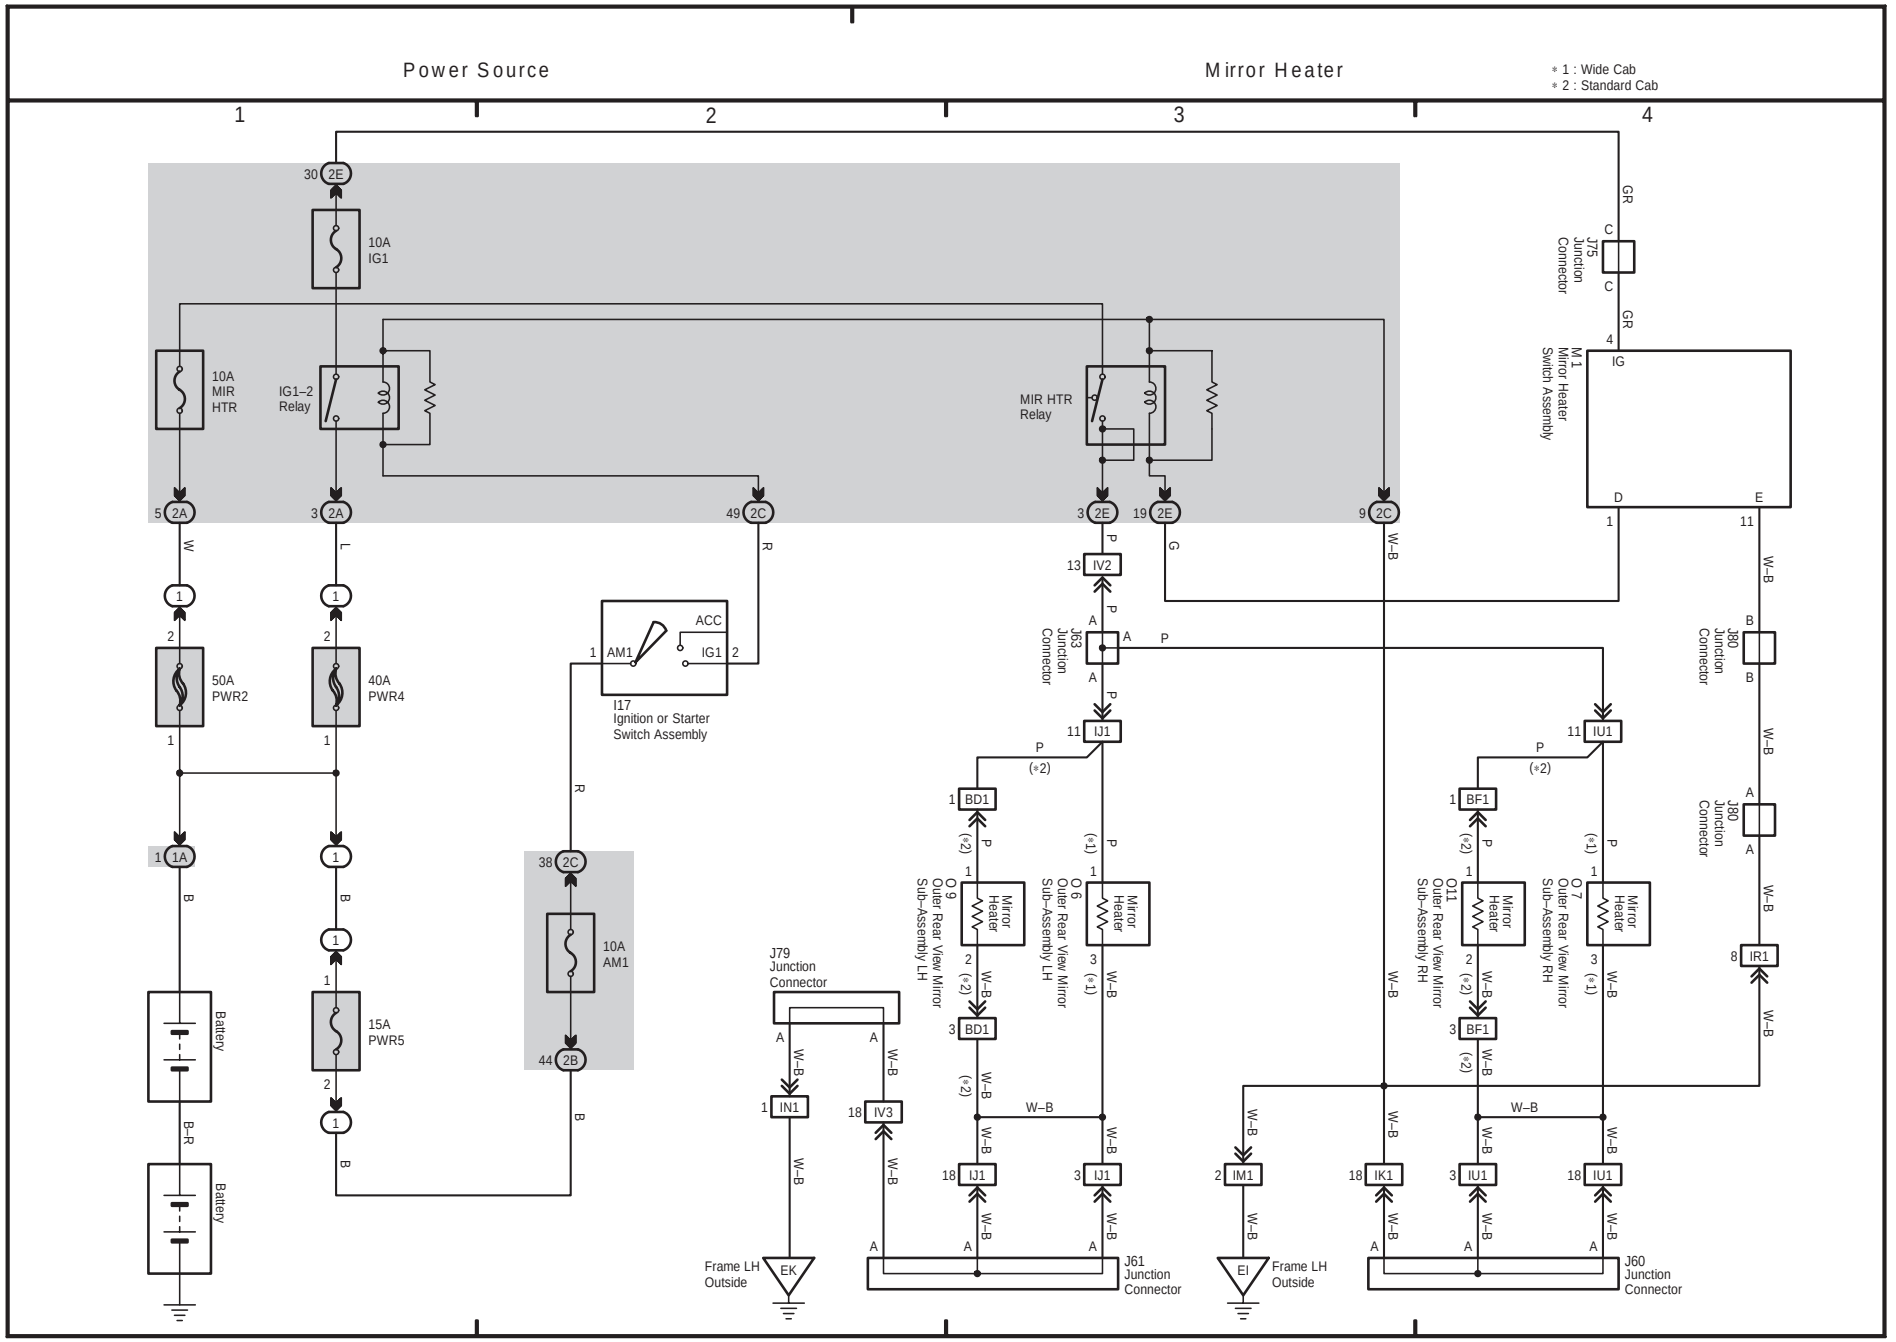

Power Source
Mirror Heater
* 1 : Wide Cab
* 2 : Standard Cab
1
2
3
4
10A IG1
10A MIR HTR
IG1–2 Relay
MIR HTR Relay
50A PWR2
40A PWR4
15A PWR5
10A AM1
Battery
Battery
I17 Ignition or Starter Switch Assembly
ACC
IG1
AM1
J63 Junction Connector
J79 Junction Connector
J61 Junction Connector
J60 Junction Connector
J75 Junction Connector
J80 Junction Connector
J80 Junction Connector
M1 Mirror Heater Switch Assembly
O9 Outer Rear View Mirror Sub-Assembly LH
O6 Outer Rear View Mirror Sub-Assembly LH
O11 Outer Rear View Mirror Sub-Assembly RH
O7 Outer Rear View Mirror Sub-Assembly RH
Mirror Heater
Frame LH Outside
Frame LH Outside
EK
EI
W–B
W
L
R
B
B–R
P
G
GR