
Position of Parts in Instrument Panel

[RHD]

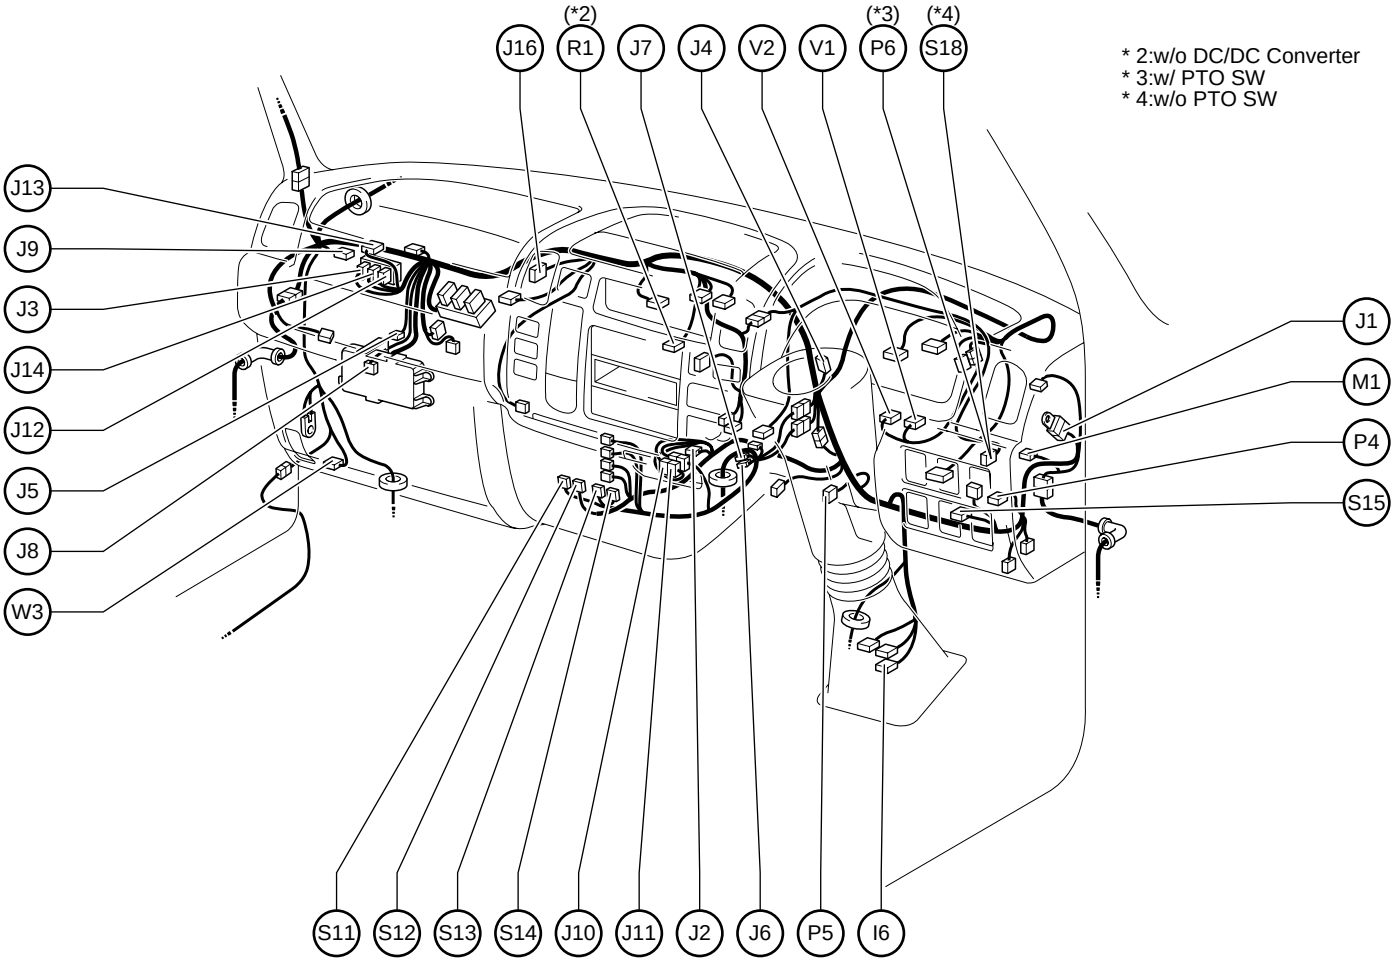

I 6 Ignition SW

J 1 Junction Connector
J 2 Junction Connector
J 3 Junction Connector
J 4 Junction Connector
J 5 Junction Connector
J 6 Junction Connector
J 7 Junction Connector
J 8 Junction Connector
J 9 Junction Connector
J 10 Junction Connector
J 11 Junction Connector
J 12 Junction Connector
J 13 Junction Connector
J 14 Junction Connector
J 16 Junction Connector

M 1 Master Cylinder Pressure Sensor

P 4 Power Outlet (Room)
P 5 PTO Clutch SW
P 6 PTO SW

R 1 Radio and Player

S 11 Skid Control ECU
S 12 Skid Control ECU
S 13 Skid Control ECU
S 14 Skid Control ECU
S 15 Stop Light SW
S 18 Short Pin (PTO SW)

V 1 Vacuum Sensor No.1
V 2 Vacuum Sensor No.2

W 3 Washer Motor