
## Connector Joining Wire Harness and Wire Harness

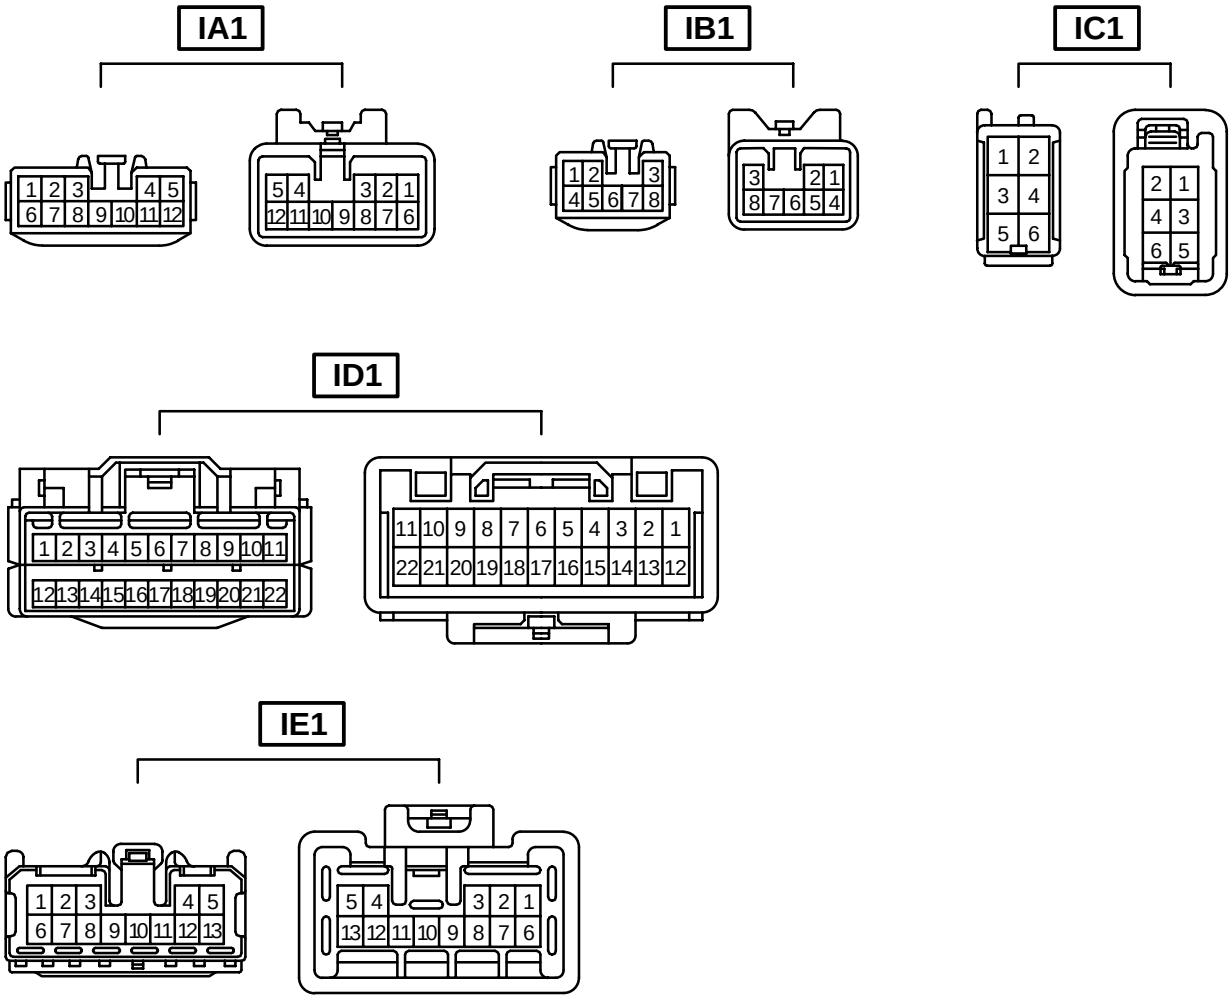


| Code | Joining Wire Harness and Wire Harness (Connector Location) |
|---|---|
| IA1 | Front Door LH Wire and Cowl Wire (Cowl Side Panel LH) |
| IB1 | Floor Wire and Cowl Wire (Cowl Side Panel LH) |
| IC1 | Cowl Wire and Sensor Wire (Behind the Combination Meter) |
| ID1 | Cowl Wire and Cowl Wire (Left Side of the Brake Booster) |
| IE1 | Instrument Panel Wire and Cowl Wire (Instrument Panel Reinforcement Center) |