
Connector Joining Wire Harness and Wire Harness

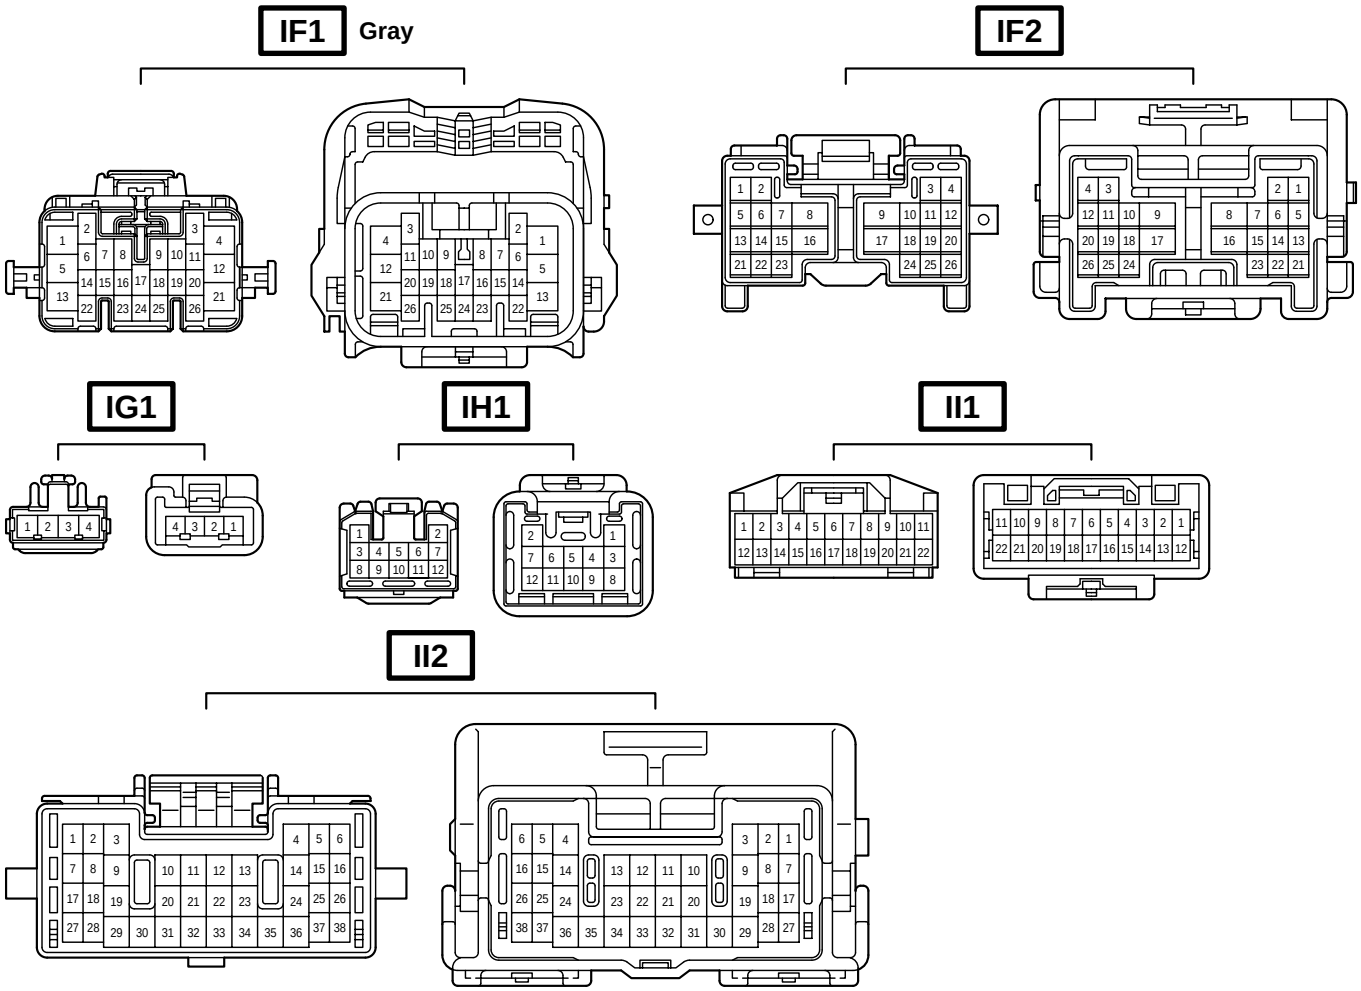

Code	Joining Wire Harness and Wire Harness (Connector Location)
IF1	Engine Room Main Wire and Cowl Wire (Right Side of the Accelerator Pedal)
IF2	
IG1	Roof Wire and Cowl Wire (Cowl Side Panel RH)
IH1	Front Door RH Wire and Cowl Wire (Cowl Side Panel RH)
II1	Engine Room Main Wire and Cowl Wire (Instrument Panel Brace LH)
II2	