
Connector Joining Wire Harness and Wire Harness

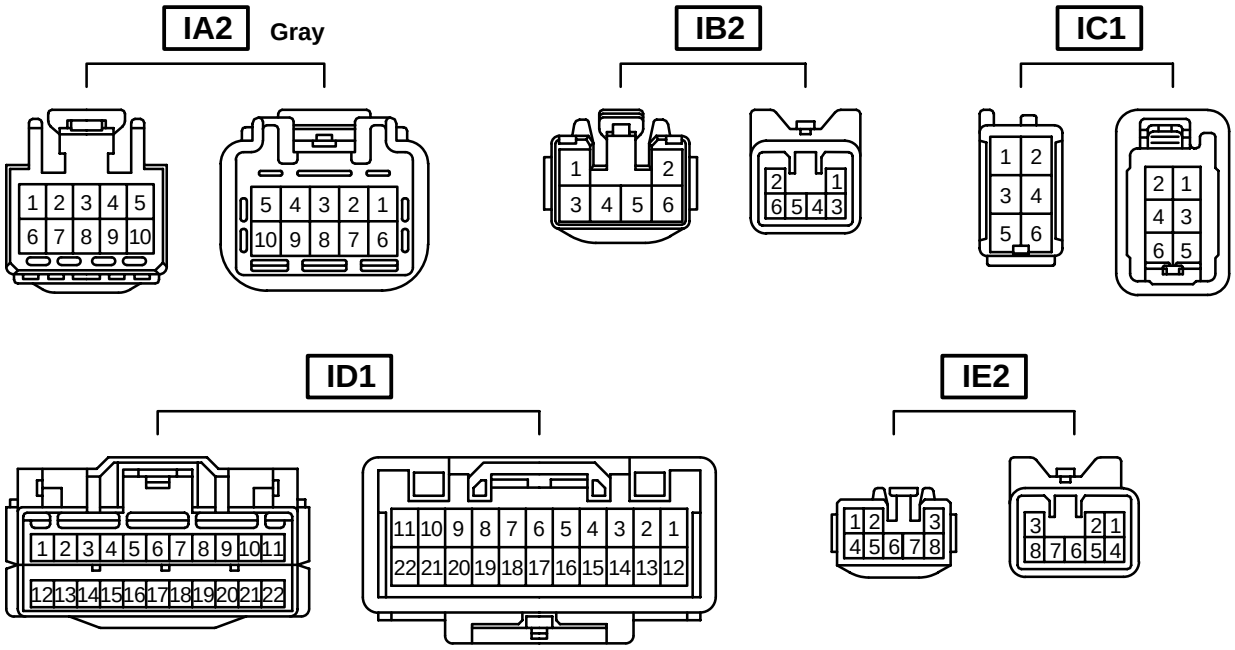

Code	Joining Wire Harness and Wire Harness (Connector Location)
IA2	Front Door LH Wire and Cowl Wire (Cowl Side Panel LH)
IB2	Floor Wire and Cowl Wire (Cowl Side Panel LH)
IC1	Cowl Wire and Sensor Wire (Behind the Combination Meter)
ID1	Cowl Wire and Cowl Wire (Left Side of the Clutch Pedal)
IE2	Instrument Panel Wire and Cowl Wire (Instrument Panel Brace RH)