
Connector Joining Wire Harness and Wire Harness

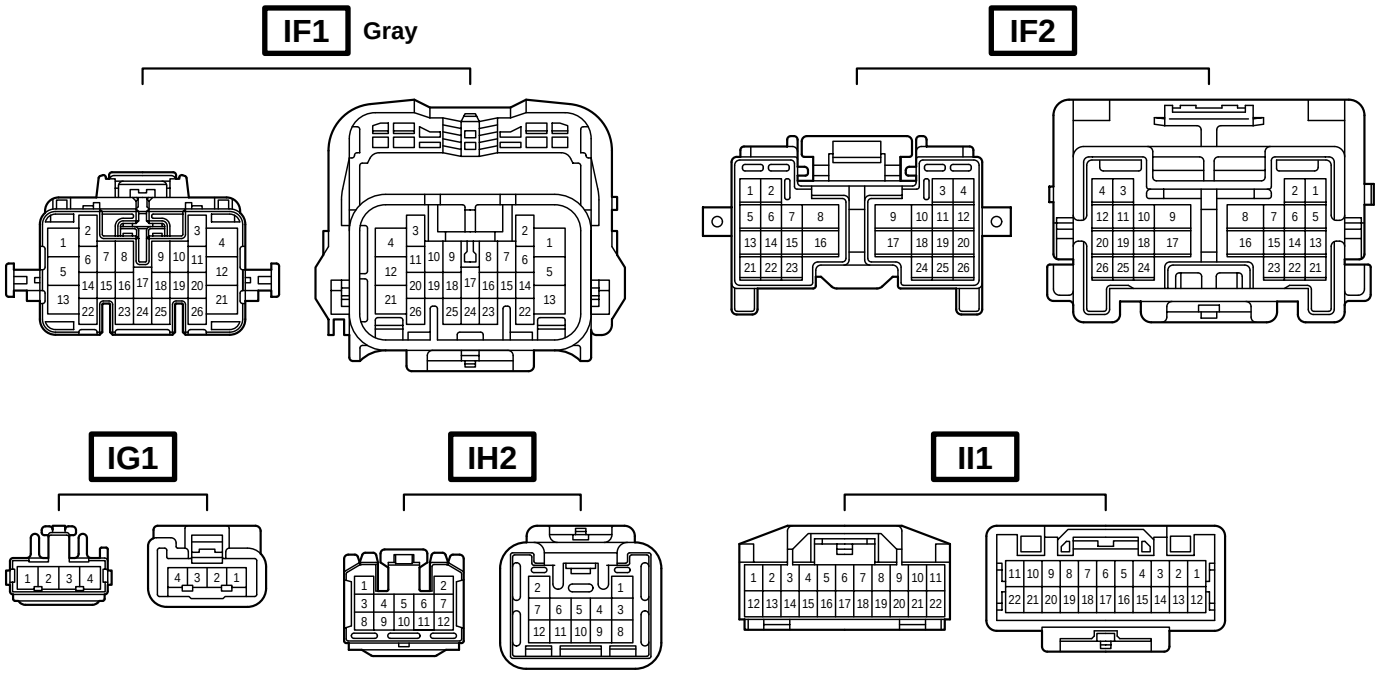

Code	Joining Wire Harness and Wire Harness (Connector Location)
IF1	Engine Room Main Wire and Cowl Wire (Left Side of the Clutch Pedal)
IF2	
IG1	Roof Wire and Cowl Wire (Cowl Side Panel LH)
IH2	Front Door RH Wire and Cowl Wire (Cowl Side Panel RH)
II1	Engine Room Main Wire and Cowl Wire (Instrument Panel Brace RH)